

OPERATING INSTRUCTIONS for VOYAGER

Complete Oiling Schedule

NOTE: This document series is meant to complement, not replace, the operator's manual that came with Voyager. Please be sure and read the manual thoroughly before operating your Voyager machine.

Below is an illustrated diagram of the oiling schedule and oiling points for your Voyager machine. Note: It's important not to OVER-oil your Voyager machine – oil as indicated, but do NOT over-oil.

Oil as Follows:

WEEKLY (or every 40 hours of operation)

Weekly places to oil should have 1 drop of oil applied in each location, no more. Please refer to the diagram on the right for the oiling points described below:

Note for Points (2) and (3) : Move the sewing head to needle # 1 to access these locations.

Presser Foot Guide Bar (2) – place 1 drop of oil in these 2 locations, directly on the bar that can be seen in the diagram.

Reciprocator Shaft (3) – The 1 drop of oil placed in this “cup” will drip down onto the main reciprocator shaft.

All Needle Bars (4) – open the plastic safety cover and reach the oiler through the slot beneath each takeup lever, and deliver 1 drop on all 12 of the needle bars.

DAILY (or every 8 hours of operation)

Place one drop of oil in the “race” of the hook (the small “gutter” indicated by the arrow in (1) on the right).

