

Happy Link Software INSTRUCTION MANUAL



303331313036

HAPPY

Contents

Regarding this software

Normal Operation	3
Features of this software	4

How to set up

How to install in PC	7
How to uninstall	11

Preparation before operation

Basic knowledge and operation	13
Exit	18
Serial port setting	19
Connecting PC and machine (Preparation)	
How to set communication	
About Cable	21
Options	23
How to set	
Installing USB driver	25

Let's use

28

Individual function and use

Operation Mode	30
Explanation of buttons	
Explanation of tool buttons	33
Usage (Operation Mode)	35
Pattern selection (Pattern)	35
Needle selection (Needle)	36
How to change Thread color	
Adjust (Adjust)	39
Repeat (Repeat)	40
Offset (Offset)	41
Frame out (Frame out)	42
Auto origin setting (Origin)	45
Locate (Locate)	44
Direct (Direct)	45
Create (Create)	46
Rotation speed indication (Speed)	49
Stitch Counter (Stitches)	49
Letter (Letter)	50

Contents

Data send Mode	51
Options in this menu	
Explanation of tool buttons	53
About Indicator	54
Usage (Data send Mode)	55
Open design	55
Reading	
Pattern open dialog	
Drag & Drop	
About etc. function option read/write	
Design information	
Print selected design	59
Save design data width function	60
Send design data	61
Preparation for reception of the data on the embroidery machine side	
Transmission of a pattern	
Frame check	63
How to check and set	
Needle selection	68
How to change Thread color	
Design adjust	71
Repeat	72
Frame out	73
Offset	74
Changing background color	75
View Jump	75
Stitch point	75
Changing size of stitch point	75
Zoom-in, out	75
View the selected block by color	76
Viewpoint	76
Simple editing	77
View the production data	85
Arrangement of files in window	87

Trouble shooting

Operation Mode Field	88
Data send Mode Field	90

Glossary	91
-----------------------	----

Regarding this software

Normal Operation

Please connect personal computer to the embroidery machine to meet the following requirements.

Applicable PC

IBM PC/AT Compatible

Useable OS

Windows 98 (including second edition)

Windows 2000 Professional

Windows Me

Windows XP Home Edition

NOTE:

Only these versions of the Operating System are supported.

CPU

Pentium2 or more with processor speed greater than 400MHz

Memory

More than 32MB (recommend more than 64MB)

Hard disk

Over 10MB of space available

Screen Resolution

800x600(over 256 colors)

A Mouse is necessary

Floppy Disk and CD-ROM drive are required

USB capable (Not required)

Features of this software

[HAPPY Link] is our machine operation software, which allows many functions such as needle select, frame move and/or setting any data function like needle color, design adjust, offset and more. Easily send your design data to your machine, from your PC. (After this, this software is called HappyLink.) Happy Link consists of two basic modes ([Operation mode], [Data send mode]). Refer to [Basic knowledge and operation].

It is possible to communicate with an embroidery machine, which is not supported by Happy Link software. If the machine is incompatible with HappyLink, you cannot use many functions. (Refer to [HappyLink software's function, which can be used by the embroidery machine,] in [Basic knowledge and operation])

Functions in this software

1.Operation mode

1. Change Needles

Moving head will cycle between colors in the direction of the arrows.

2. Forward, Back

You can move forward or backward through the design without sewing.

3. Position Return

You can move the hoop back to its previous position.

4. Origin

You can return the hoop to its original starting position.

You can return the frame and design data to the original start point with the stitch count to zero. If you click on it again, the hoop and design will move back to the last position and stitch.

5. Top

This will reset the design to the first stitch, but the hoop will not move to the origin.

If you click on it again, the pattern data will return to its original position. The top of file mark indicator on the embroidery machine LCD will blink.

6. Pattern selection

For selecting a pattern that has been previously saved in the embroidery machine, or deleting or renaming the design.

7. Needle selection

For setting the order in which the needles will be used.

8. Adjust

For editing the design; i.e. scaling, rotation, stitch width adjustment, and coordinate changes.

9. Repeat

For repeat sewing of the same pattern.

10. Offset

Allows you to set the machine to have a starting position in which the frame may be located offset from the actual position that stitching will begin. This allows for easy loading of the frame into the machine.

11. Frame out

This allows you to have the frame move out from under the needles after a certain color or needle has finished sewing. This will allow for trimming or the application of an appliqué.

12. Auto origin setting

When the design is completely finished, the frame returns to its original starting position automatically instead of remaining at the last stitch of the design.

13. Locate

If the power source of the embroidery machine is shut off, and you changed the drive frame position; or the machine stopped due to a power outage while sewing, this function enables you to move the drive frame back to the previous position after turning the power back on. (This button is gray color and you cannot use this function, when the embroidery machine does not have this ability.)

14. Direct

Move directly to a stitch or color change point or repeat number in the design.

15. Create

Used for the basic setup of the embroidery machine.

16. Rotation speed indication

Display the rotation speed of main shaft in the machine, (r.p.m.)

17. Stitch Counter

Display the current number of the stitch being sewn

18. Letter

Selecting letters from internal fonts in the embroidery machine and stitching them.

2. Data send mode

1. Open design

This function reads embroidery data stored in the personal computer or on a diskette and displays them.

2. Needle selection

This function sets the order of needles to sew. At every color change, the machine changes to the next set needle.

3. Design adjust

This function sets scaling, rotation and reversing, etc.

4. Repeat

This function sets up sewing the same pattern multiple times on the same cloth.

5. Frame out

After having sewn the designated color, this function moves the drive frame to a position previously designated. This function is used when you want to do something in the middle of sewing such as add an appliqué piece.

6. Offset

Allows you to set the machine to have a starting position in which the frame may be located offset from the actual position that stitching will begin. This allows for easy loading of the frame into the machine.

7. Simple editing

This function is to do simple data editing of stitches of pattern data, such as deletion, moving, or addition of a function, etc.

8. Send design data with functions to the machine

This function transmits the pattern with the settings of needle changes and editing settings, etc. into the embroidery machine.

9. Save design data with function

This function saves the pattern with the settings of the Needle selection and the Simple editing, etc. in the personal computer or on a floppy disk.

10. Changing background color

This function enables the change of the background color (color of cloth) of the displayed pattern.

11. Frame Check (Transmission of data after confirming pattern position and the drive frame size)

By this function, you can confirm the pattern and position of the drive frame in the display. You can move the drive frame, if you moved the frame in the display. Then, the pattern with the settings of needle changes and edit settings, etc., is transmitted to the embroidery machine.

12. View the production data

Production data is displayed.

13. Print selected design

You can print the selected design.

14. View the selected block by color

Displays only the current color block in [simple editing].

How to set up

Note: In order to use this software, you need to have a basic knowledge of Windows.

How to install in PC


Note:

Install in the Administrator if you use WindowsXP or Windows2000.


Install this software after uninstall, if you have already installed Happy Link software.

Sample patterns are installed in the directory c:\Program files\Happy\HappyLink\Pattern.

1. Insert the CD in the CD-ROM drive.
2. [Setup] normally, is automatically displayed, and the HAPPY Link setup prepares the Install Shield wizard that controls the setup. (This process takes a few moments)

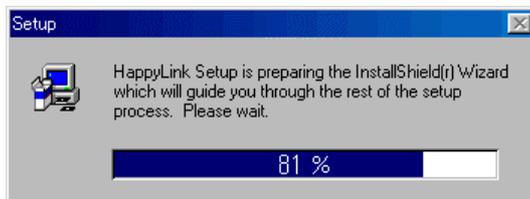


3. [Welcome] scene is displayed. Please click on [Next].
4. Please click on [Next].

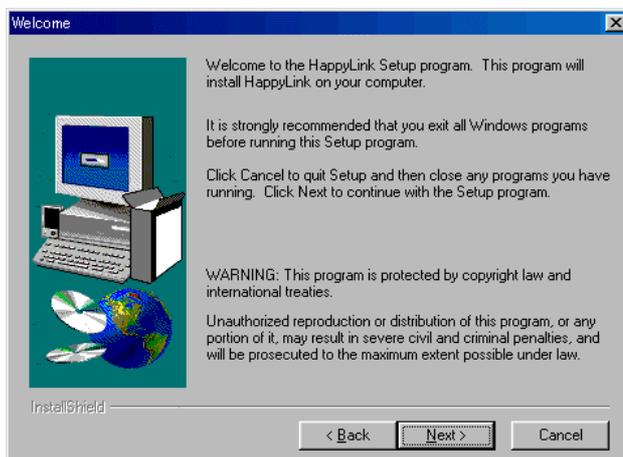

Note:


4-1. If there is another program running in the PC, please click on [Cancel] to exit [Set up]. Please select [Exit Setup].

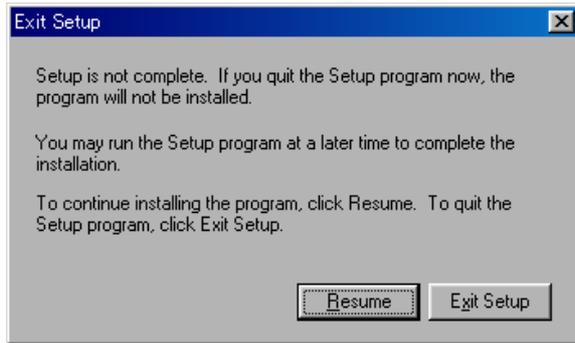


4-2. Then, exit all programs that are running.

4-3. Take out the CD-ROM, and start from the beginning set up again.

5. Please input information on user. Please click on [Next] after inputting.

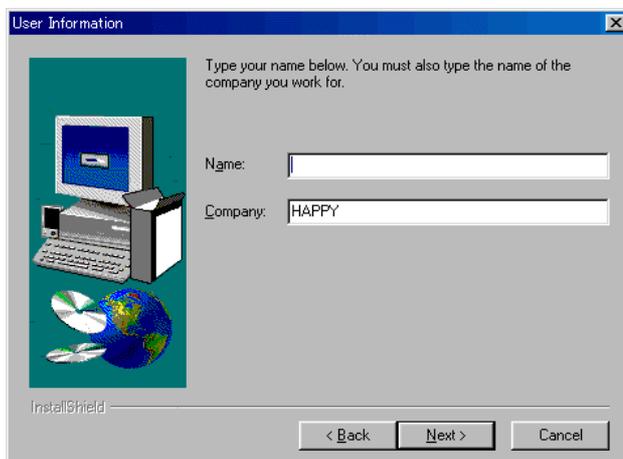


6. Please click on [Next]. (Designating a directory to install Happy Link.)

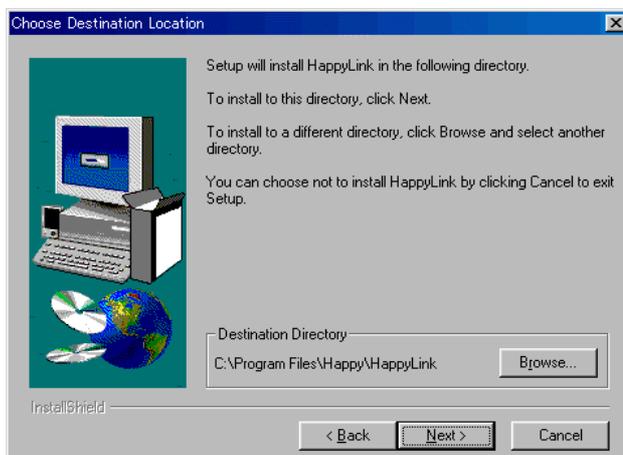


(If you wish to alter the location of the installation, please click on [Browse].)


7. Please click on [Next]. (Designating folder to use.)

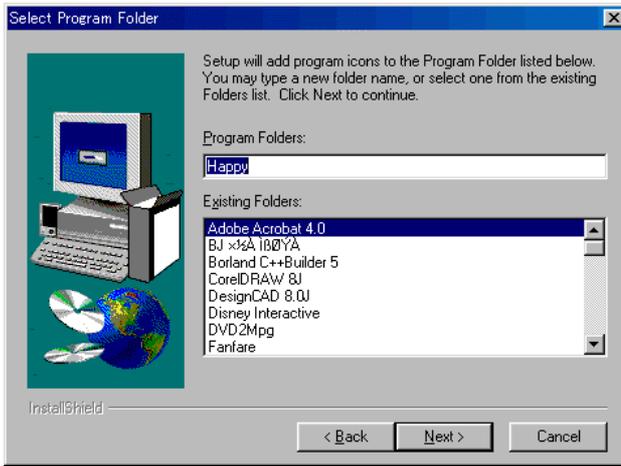


8. Please click on [Next]. The machine will start to copy files.

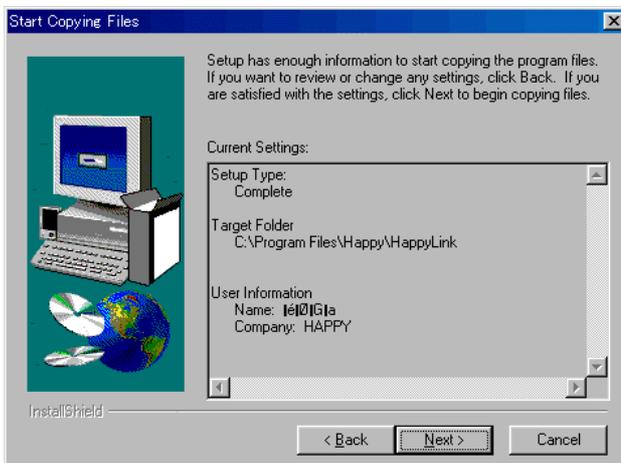

9. Decompression is being done.

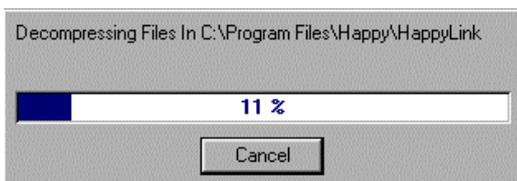


10. A Folder with [HAPPY Link] will be opened. Please click on the “X” at the right upper of the window to close it.

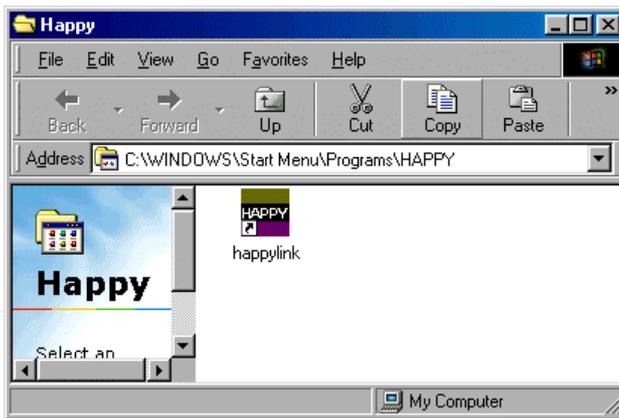

Note

It is OK to reverse the turn to close, though a turn of 10th and 11th clause may reverse by PC.


11. Setup has been completed. Please click on [Finish].

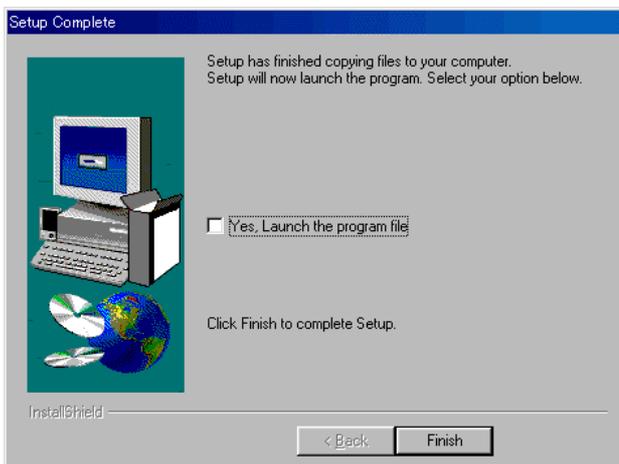


12. After you have finished the installation, please take out the CD-ROM.

How to uninstall


1. Please click on in order: [Start]-[Settings]-[Control panel].

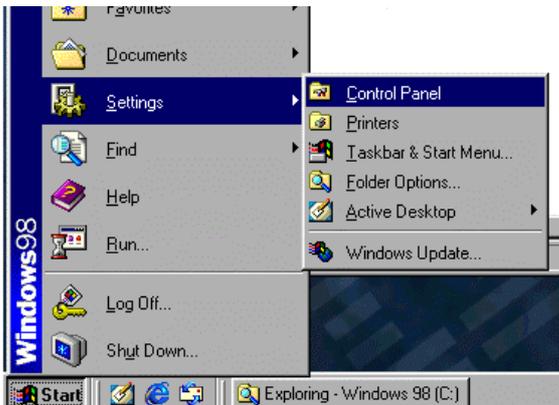

2. Please click on [Add/Remove program Icon] in the control panel.

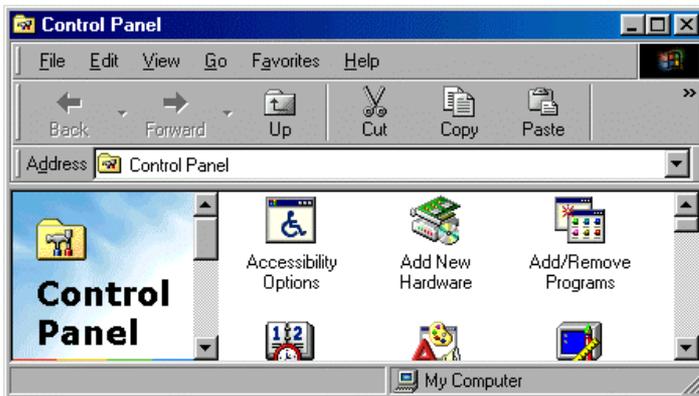


3. Please select HappyLink from program list now installed, then click on [add / Remove].

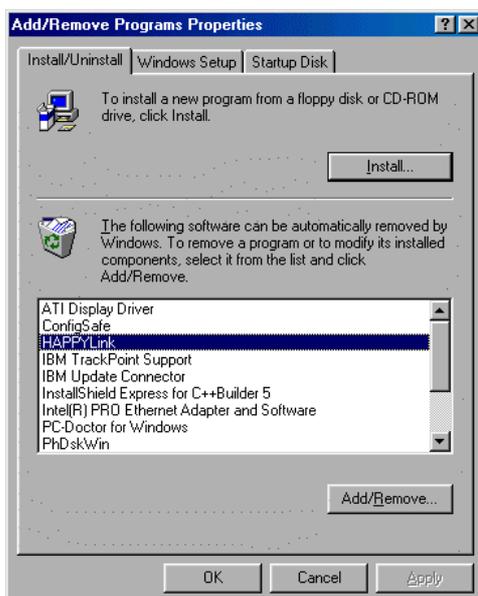

4. A message to confirm your desire to uninstall the software is shown. Click on [Yes].



5. Click on [OK] to finish uninstalling.

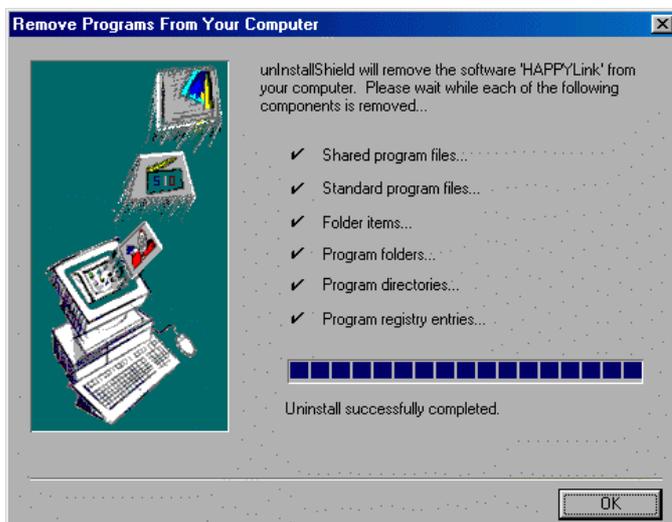

Note:

If you are asked to delete common files, please select [All no].

Basic knowledge and operation

Mode:

HAPPY Link software has two modes.

1. [Operation mode]: You operate the embroidery machine from your PC.
2. [Data send mode]: You can send the embroidery design data to the machine.

[Outline of operation]

Operation mode:

You set the settings of the embroidery machine using a personal computer. The settings are set for the current pattern selected in embroidery machine.

1. Select Operation mode. (On start-up of Happy Link, mode is always [Data send mode].)
2. Set the various settings.

Data send mode:

The pattern and its settings are sent to the embroidery machine.

1. You read a pattern and it is displayed in personal computer.
2. You set the various settings.
3. You send a pattern to the embroidery machine.

Preparation:

Please connect your HAPPY embroidery machine to your PC with the supplied RS232C or a USB cable.

Don't use both RS232C and USB. Connect and use only one.

In case of RS232C

1. The connecting RS232C cable

Be sure to connect them while the personal computer and embroidery machine are both turned off.

If you connect while the PC and the embroidery machine are both turned on, it is possible to damage either one.

The machine connector is either 9 pins or 25 pins. The PC connector type is either (9 pins or 25 pins). For details, see [[Serial port setting](#)]

Note:

After having used USB, if you change USB to RS232C, set up [Options] again. Refer to [Options].

The message of [A COM port is being used with others] may be shown at the start-up or during the use. This message is shown when other software is using the serial port.

Please exit HAPPYLink in this case and restart the HAPPYLink program after the software, which is using the port, has been exited. Or, try to set the computer to another COM Port.

Please refer to [[Serial port setting](#)].

In case of USB

1. Connecting USB cable

PC side:

If the HappyLink is running, please close the program. However, DO NOT turn the PC off.

Embroidery machine side:

Put the embroidery machine in [drive mode] (which is the mode you can start sewing). For information about [drive mode], refer to the Instruction manual of the embroidery machine.

Please connect the embroidery machine to the PC with a USB cable as above. (When you connect for the first time, Item 2 below will start automatically.)

2. Installing USB driver

Refer to the [\[Installing USB driver\]](#).

3. Setting the [Options]

Activate the HappyLink program. Select [File], [Options] then select [USB] in [Communication] in menu bar. For details, see [\[Options\]](#). You don't need to set it up again.

Note:

The message of "USB is not ready." is shown, if you connected the machine after HappyLink program start-up. In this case, the PC cannot recognize the USB. Close the HappyLink program and re-start it.

The connection of a cable is necessary for the following functions.

Data send Mode:

The transfer of the pattern, The viewing of the production control data, Frame check


Operation Mode:

All the functions

Note: Refer to [HappyLink software's functions, which can be used by the embroidery machine,] in [Basic knowledge and operation]

The screen after the HappyLink start-up (Always in Data send mode)

The screen after the HappyLink start-up is shown as follows.

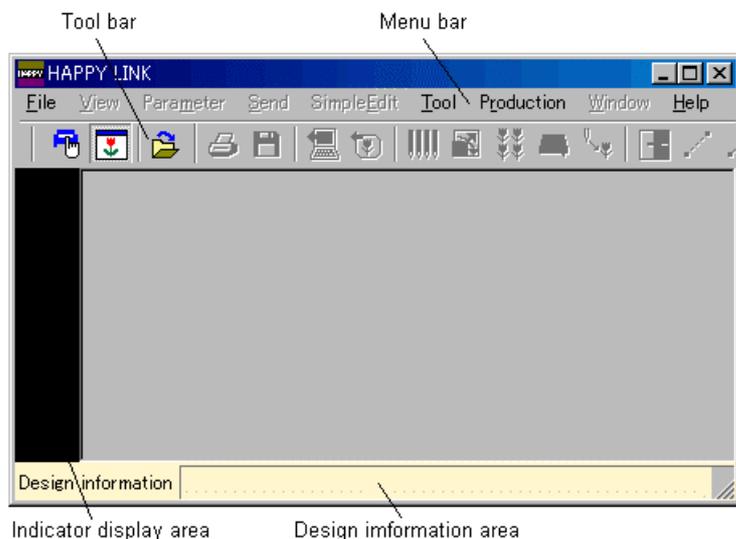

Indicator display area

The area used to display Indicators after the various settings have been made in the Data send mode.

The USB Indicator is shown if the USB connection is in use.



USB Indicator is gray color

When HappyLink is first started-up or you select the USB in the [Options] Menu.



USB Indicator is green color

When you use a function which needs to send or receive data from the machine

Example: Operation mode, Send design etc.



Data send mode button

This button stays pushed when HappyLink starts up or the operation mode is closed.



Switching to the operation mode button


Click on this to start the Operation mode.

Note:


Two messages are shown in case the embroidery machine has no pattern. ("Pattern is not found." and "It could not get data. Please try again."). And, the [Operation mode] is not started. Please try again after transmitting a pattern to the embroidery machine in the [Data send mode].

The other gray menus and buttons will be functional, after you read the pattern design.

Operation of mouse:

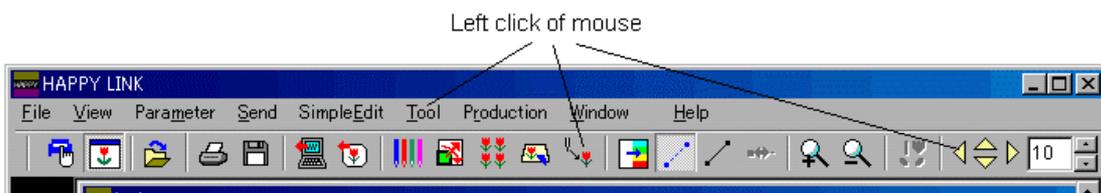

Slide bar Up/Down button

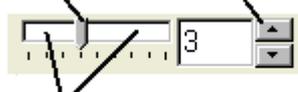

Even if you click this portion, you can change number.
Everytime you click, the number changes in a given step.

Please refer to Setting of Serial Communication.

HappyLink's functions, which can be used by the embroidery machine

The functions that can be used are marked with "o". Functions not available are marked with "x".

The HCS machine is Compatible.

1. Operation mode

Embroidery machine		HappyLink		
		Compatible		Incompatible
Connect with cable	RS232C	o		o
	USB	o		x
		connect	disconnect	<u>Don't use in Operation mode</u>
Frame operation		o	x	x
Change Needles		o	x	x
Forward		o	x	x
Stop		o	x	x
Back		o	x	x
Position Return		o	x	x
Origin		o	x	x
Top		o	x	x
Machine setting operation		o	x	x
Pattern selection		o	x	x
Needle selection		o	x	x
Adjust		o	x	x
Repeat		o	x	x
Offset		o	x	x
Frame out		o	x	x
Auto origin setting		o	x	x
Locate		x	x	x
Direct		o	x	x
Create		o	x	x
Letter		o	x	x
Speed, Stitch indication		o	x	x
Rotation speed indication		o	x	x
Stitch Counter		o	x	x

Note:

If your machine is incompatible, please select "incompatible with HAPPYLink" on [Machine Type] in Options Dialog box under the File Menu. (Refer to [Options].)

In Direct function, there is no setting by the repetition number.

2. Data send mode


Embroidery machine		HappyLink			
		Compatible		Incompatible	
Connect with cable	RS232C	0		0	
	USB	0		×	
		connect	disconnect	connect	disconnect
Switching to operation mode		0	×	×	×
Data send mode		0	0	0	0
Open design		0	0	0	0
Print selected design		0	0	0	0
Save design data		0	0	0	0
Send design data		0	×	0	×
Frame Check		0	×	×	×
Needle selection		0	0	0	0
Design adjust		0	0	0	0
Repeat		0	0	0	0
Frame out		0	0	0	0
Offset		0	0	0	0
Changing background color		0	0	0	0
View jump		0	0	0	0
Stitch Point		0	0	0	0
Changing size of stitch point		0	0	0	0
Zoom in		0	0	0	0
Zoom out		0	0	0	0
Viewpoint		0	0	0	0
Simple editing		0	0	0	0
View the selected block by color		0	0	0	0
View the production data		0	×	×	×

Note:

If your machine is incompatible with HappyLink and without Auto-serial function, refer to [Send design] to send a design to the embroidery machine.

Exit

Click on "File" on the menu bar and "Exit." Or you can close HAPPYLink program window.

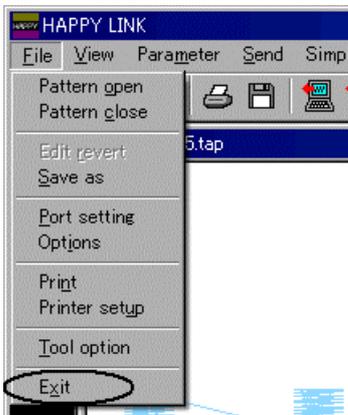

Serial port setting

Connecting PC and machine (Preparation)

Please connect the RS232C serial port in your PC and the serial port on the machine using RS232C serial cable. A straight cable does not work. Regarding specifications, please refer to [Cable].

Note:

Be sure to connect or disconnect the PC and embroidery machine when they are both turned off.

If you connect while the PC and the embroidery machine are both turned on, it is possible to damage either one.

Don't use both RS232C and USB. Connect and use only one.

How to set communication


You need to set "Port No." and "Baud rate" in this menu.

Note:


The default setting of [Port No.] is Port1 and [Communication speed] is 38400 BPS.

It is not necessary to set it up again every time the software is started.

1. Click on "File" on the menu bar and select 'Port Setting.'

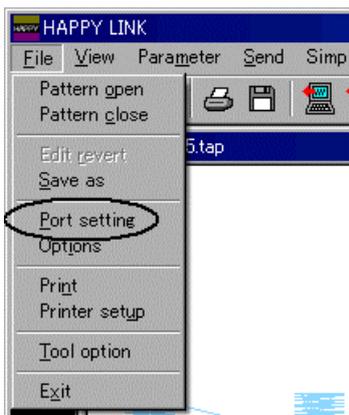

2. The port setting menu is as follows.

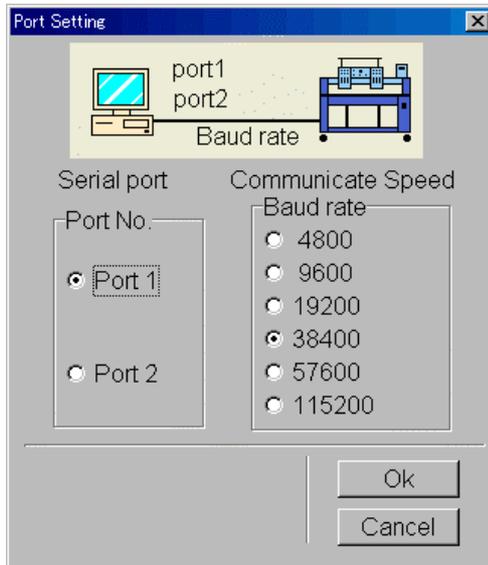

3. Select Port No.

Match the connecting serial cable to the PC.

Note:

“Port No.” is Serial port No. in your PC. You can select Port1 (COM1) or Port2 (COM2), the default setting is Port1 (COM1).

Please look at your PC instruction manual to identify your Serial port.


4. Please adjust (Baud rate) to communication speed of the embroidery machine with Communication Speed.

5. Click on “OK” for return menu.

About Cable


The specifications for the cable are as follows:

1. Connection D-sub9pin – D-sub9pin

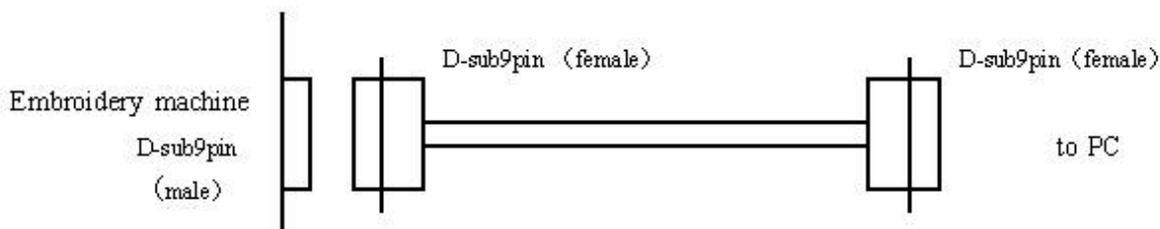


machine side D-sub 9pin				PC side D-sub 9pin		
Signal			pin number	pin number	Signal	
Signal name	EIA code				EIA code	Signal name
Receive data (Rx D)	BB		2	2	BB	R x D
Transmit data (Tx D)	BA		3	3	BA	T x D
Data terminal ready (DTR)	CD		4	4	CD	D T R
Signal ground (GND)	AB		5	5	AB	G N D
Data set ready (DSR)	CC		6	6	CC	D S R
Request to send (RTS)	CA		7	7	CA	R T S
Clear to send (CTS)	CB		8	8	CB	C T S

2. D-sub25pin – D-sub25pin

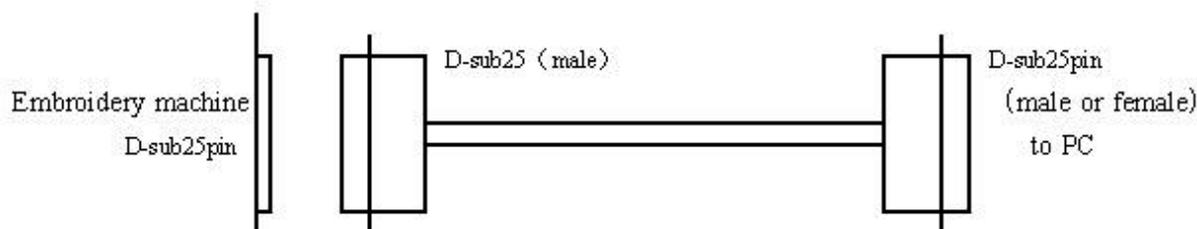

machine side D-sub 25pin				PC side D-sub 25pin		
Signal			pin number	pin number	Signal	
Signal name	EIA code				EIA code	Signal name
Transmit data (T x D)	BA		2	2	BA	T x D
Receive data (R x D)	BB		3	3	BB	R x D
Request to send (R T S)	CA		4	4	CA	R T S
Clear to send (C T S)	CB		5	5	CB	C T S
Data set ready (D S R)	CC		6	6	CC	D S R
Data terminal ready (DTR)	CD		20	20	CD	D T R
Signal ground (GND)	AB		7	7	AB	G N D
Frame ground (F G)	AA		1	1	AA	F G

3.D-sub25pin – D-sub9pin

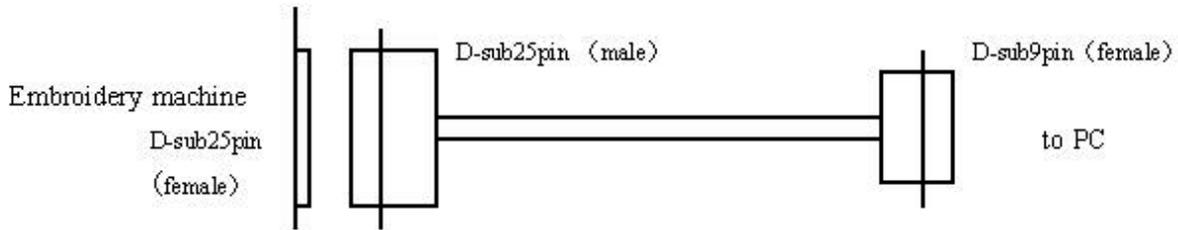

Machine side D-sub 25pin			PC side D-sub 9pin		
Signal		pin number	pin number	Signal	
Signal name	EIA code			EIA code	Signal name
Transmit data (T x D)	BA	2	2	BB	R x D
Receive data (R x D)	BB	3	3	BA	T x D
Request to send (RTS)	CA	4	4	CD	DTR
Clear to send (CTS)	CB	5	5	AB	GND
Data set ready (DSR)	CC	6	6	CC	DSR
Data terminal ready (DTR)	CD	20	7	CA	RTS
Signal ground (GND)	AB	7	8	CB	CTS

Please use a cable that has suitable length from the embroidery machine.
Using a cable that is longer than 10 meters may cause malfunctions.

Options

Note:


Refer to the [Preparation] of the [Basic knowledge and operation] about the connecting the cable.
It is not necessary to set it up again every time the software is started.

How to set:

1. Click on the "File" in the menu bar then select "Options".



2. "Options" menu will open.

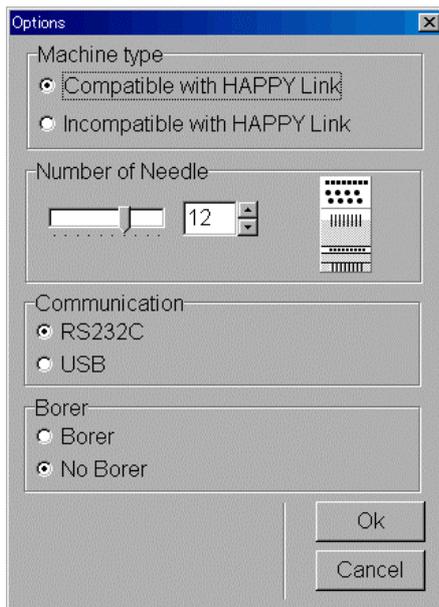

3. Please check the type of an embroidery machine in [Machine Type].

If your machine is compatible with HAPPYLink

Check [Compatible with HappyLink]. In this case, you can use operation mode function.

If your machine is incompatible

Select "incompatible with HAPPYLink". You cannot switch to "Operation mode" after selecting incompatible. However, you can use "Data sending mode". In addition, Production information and Drive frame check will not work.

Note:

If you use "Operation mode" for incompatible machine, the Machine will give an error code.

4. Please set the number of needle bars with [Number of Needle].

Please set number of needle each head has.

5. [Communication] will determine communication method with the embroidery machine.

Please select from either RS232C or USB. Please set according to PC you use.

Note:

In case the machine is not installed with USB port, please select RS232C.

The following message is indicated when you select the [USB] without connecting the USB. And, the setting returns to the [RS232C].



(USB is not ready.)

Refer to the [Preparation] of the [Basic knowledge and operation] about the connecting the cable.

Don't connect both RS232C and USB. Connect and use only one.

6. If the embroidery machine has a borer function, please set Borer.

7. Setting will finish with [OK].

Installing USB driver

Note:

Click on [continue] although a warning message of [the compatibility with XP for the driver] is indicated after the designation of the folder to search in for the driver in Windows XP.

Preparation:

PC side:

If the HappyLink is running, please close the Program. Do not turn the PC off.

Embroidery machine side:

Put the embroidery machine in [drive mode] (which is the mode you can start sewing in the embroidery machine).

For information about [drive mode], refer to the Instruction manual of the embroidery machine.

1. Please connect to the USB connector on the embroidery machine and the PC with the proper USB cable. A message of [New Hardware is found...] is shown. Then, the Wizard to install is shown.
2. The HappyLink Install CD must be inserted into the CD-ROM drive of the PC.
3. As the installation of "the HappyLink software begins automatically, choose [Cancel]. Then, as message of [Exit setup] is shown, click on [Exit setup] to exit installation. Then continue the wizard to find a driver.
4. This wizard searches for new drivers for USB Device. Please click on [Next] in following Wizard.




5. Please choose how to search for driver. Choose [Recommended] and click on [Next].



6. Please click on [Browse] to specify the locations to search for driver.



7. Please specify the [USB driver] in CD drive. Then, click on [OK].

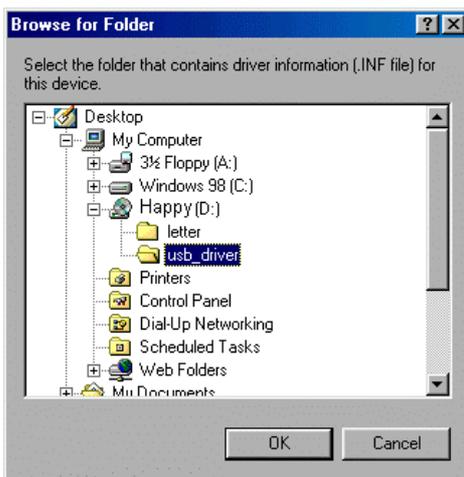


8. Please click on [Next].



9. Windows is now ready to install the driver for [Happy Embroidery Machine]. Please click on [Next].



10. Copying Files.

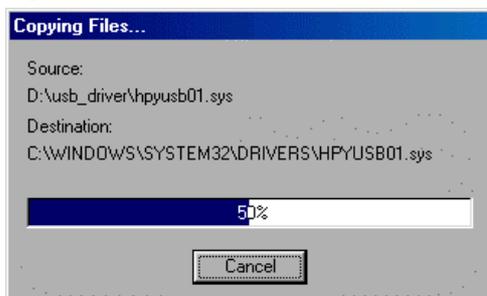

11. Windows has finished installing of driver. Please click on [Finish] to finish wizard.



Let's use

(Example) We will sew a sample pattern (flower1.tap).

The pattern is installed in the directory c:\programFiles\Happy\HappyLink\pattern.

At this moment, the embroidery machine and personal computer are connected with RS-232C.

Preparation:

With cloth and drive frames being ready, the embroidery machine must be ready for sewing. Please set needle drop point in the center of the drive frame. And, you need to make the embroidery machine the [drive mode] (which is the mode you can start sewing in the embroidery machine).


(Regarding preparation, please refer to instruction manual for the embroidery machine.)

STEPS

To activate software - To read pattern - To transmit – To embroider


1. To activate software

As illustrated below, you select [Start]-[Program]-[Happy]-[HappyLink].

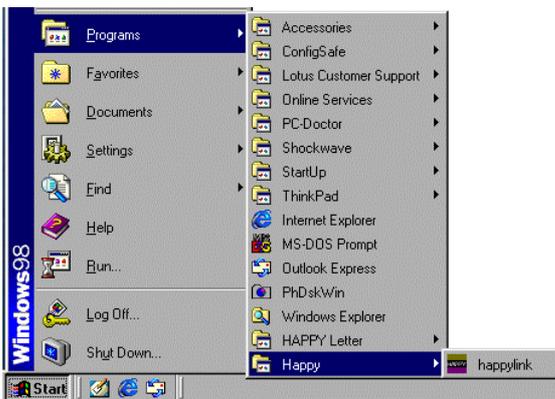

2. To select pattern

Please click on  pattern read button to open as illustrated below.

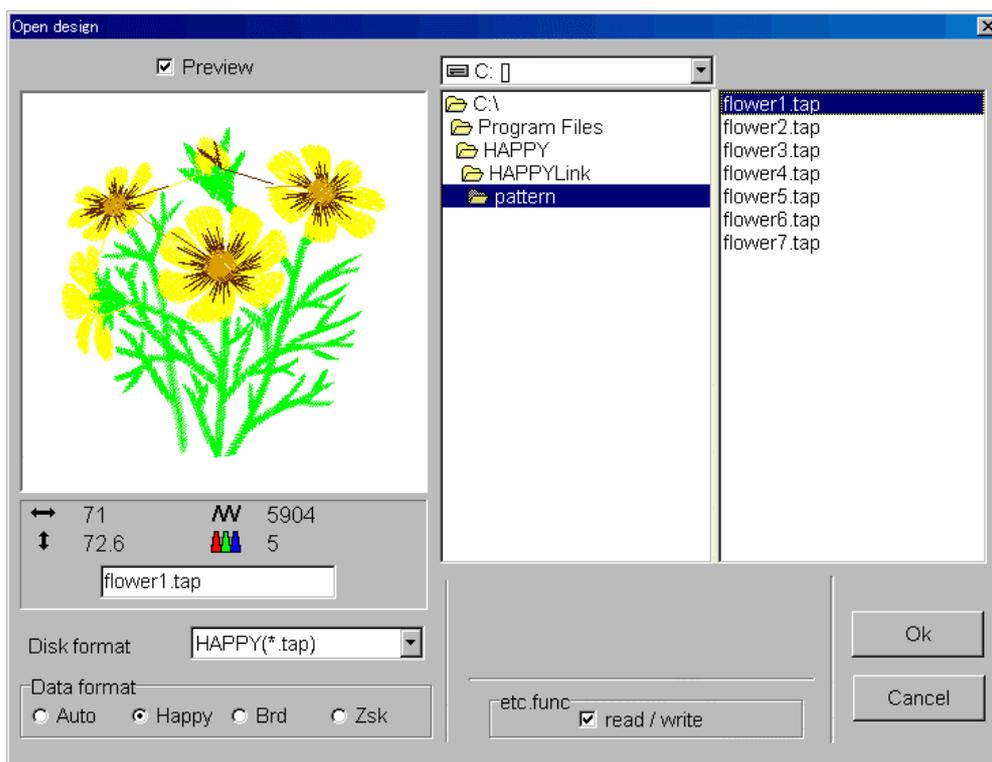

Please make sure C Drive is selected and double-click on the [Pattern] folder. Finally, select the pattern (flower1.tap) and click on [OK].

3. To transmit pattern

When you click on  the pattern transmission button, pattern data is transmitted to the embroidery machine. At first, you will hear a clicking sound. And then, when pattern has been transmitted, you will hear click sound again.


When the message [Complete] is displayed on the PC, please click on [OK]. (Please refer to [Send design data]).

4. To embroider

When you press the start button on the embroidery machine, the drive frame will move along the shape of the pattern to confirm its size. (Please take care to check if the presser foot on the needle bar doesn't hit the drive frame). Press the start button again to start sewing.

Operation Mode

You will switch to the operation mode when you click on  in the Data send mode. At this moment,  the Frame operation button is shown pressed. This setup is in effect for the pattern which is sewn with the embroidery machine.

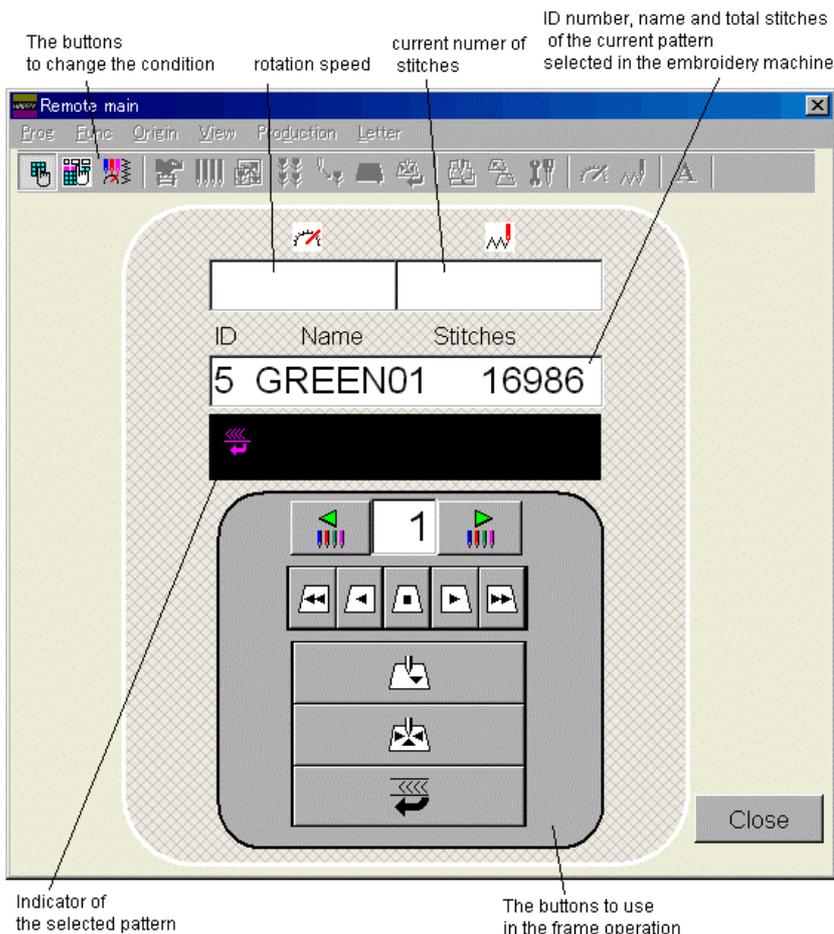

Note:

Two messages are shown if the embroidery machine has no pattern. (“Pattern is not found.” and “It could not get data. Please try again.”) And, the [Operation mode] will not start. Please try again after transmitting a pattern to the embroidery machine in the [Data send mode].

Display

The ID number, name, total stitches and Indicator of the current pattern which is selected in the embroidery machine is displayed.



Indicator

The condition of the currently selected pattern is indicated. They are [Top], [Cap frame] and [Convert cap] from the left.

[Top]: It is turned on when a pattern data is at the beginning.

[Cap frame]: It is turned on when the cap drive has been installed.

[Convert cap]: It is turned on when the Convert cap (no.6 of the “create”) is checked.

In this mode, you can use your PC to operate many machine functions. Use the left mouse button to control these remote-operations.

There are three conditions in this mode.

1.  [Frame operation button] is pressed
Operating of frame and needle-change etc. in embroidery machine
2.  [Machine setting operation button] is pressed
Pattern selection and needle selection functions of the embroidery machine
3.  [Rotation speed and Stitch Counter button] is pressed
Display of the current stitch number or speed of embroidery machine

1. If the **Frame operation button is pressed**

You can use your PC to operate machine functions, Change Needles, move Forward in the Designs, etc.

Explanation of buttons



You can select the needle that you will use.

The Moving head will move in the direction of the arrow marks. The number indicates the needle bar in use.



You can move the drive frame continuously along the stitches of the pattern.

When you click on the button, the frame moves along the design ten stitches without sewing.

Push the stop button to stop.



The drive frame goes forward only one stitch without sewing. Push the stop button to stop.



Stop moving Forward or Backward.



The drive frame moves back one stitch without sewing. Push the stop button to stop.

Back (10 stitches)

The drive frame backs up 10 stitches at a time. It will stop at the start of the pattern. Push the stop button to stop.


Position Return

You can cause the frame to return to its previous position.

If you move the drive frame with the frame movement keys after you have stopped the embroidery machine in the middle of sewing, when you click on this key, the drive frame will return to where it was before it was moved.

Note:

The following message is shown after clicking on this button.

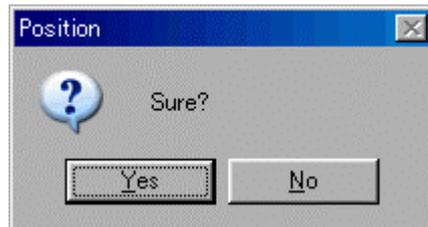

Be careful, as the frame will move after clicking on [Yes].


Origin

You can return the frame to its original starting position.

You can return the frame and design data to the Origin or start point, stitch count to 0. If you click on it again, the frame and design will move back to the last position or stitch.

Note:

The following message is indicated after clicking on this button.

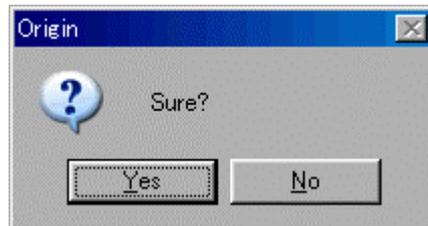

Be careful, as the frame will move after clicking on [Yes].

Top

This will reset the design to the first stitch, but the frame will not move to origin.

If you click on the Top key when the machine is stopped, the data of the pattern will go to the first stitch.

Top indicator of the embroidery machine will light.

If you click on it again, the pattern data will return to its original number. The top indicator of the embroidery machine will blink.

When you start sewing from the top, sewing resumes from the start of the pattern with the drive frame at its current position.

Explanation of tool buttons

2. When the machine setting operation button is pressed

Tool button is shown below.



Just click on an icon to set an operation.



Frame operation button

Frame move, Change Needles, Forward, and Back.



Machine setting operation button

For Pattern selection, Needle selection, editing, scale, and repeat functions.



Rotation speed and stitch counter display button

Displays current stitch number and/or speed of the embroidery machine.



Pattern selection

For selecting, deleting or renaming a pattern that is saved in the embroidery machine's memory.



Needle selection

For setting the order in which the needles will be sewn.



Adjust

For editing the scaling, rotation, stitch width adjustment, and coordinate changes in the design.



Repeat

For repeat sewing of the same pattern.



Offset

Allows you to set the machine to have a starting position in which the frame may be located offset from the actual position that stitching will begin. This can allow for easy loading of the frame into the machine.



Frame out

This allows you to have the frame move out from under the needles after a certain color / needle has finished sewing. This will allow for trimming or the application of an appliqué.



Auto origin setting

When the design is completely finished the frame returns to its original starting position automatically instead of remaining at the last stitch of the design.



Locate

If the power source of the embroidery machine is shut off, and you changed the drive frame position; or the machine stopped due to a power outage while sewing, this function enables you to move the drive frame back to the previous position after turning the power back on.

(This button is gray color and you cannot use this function, when the embroidery machine does not have this ability.)



Direct

Move directly to a stitch or color change point or repeat number in the design.



Create

For the basic setup of the embroidery machine.



Rotation speed indication

Display the rotation speed of main shaft in the machine while sewing when  Rotation speed and stitch counter display button is pressed, (r.p.m.)



Stitch Counter

Display the current number of the stitch being sewn when  Rotation speed and stitch counter display button is pressed.



Letter


Selecting letters from internal fonts in the embroidery machine and stitching them.

Usage (Operation Mode)



Pattern selection (Pattern)

When you click on the Pattern control button, the pattern control dialogue is displayed. The current pattern selected in the embroidery machine is displayed in Bold in the top of the window.

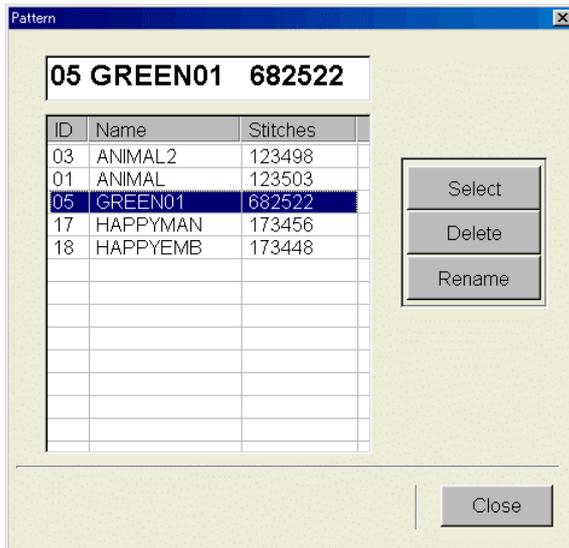

The pattern list in the embroidery machine's memory is displayed.

Function:

Selection of pattern

Select a pattern ID. Click on the ID number, and click on "Select."

Deletion of pattern

Deleting the pattern from the machines memory. Click on the ID number, and click on "Delete."


Note: The message of "Sure?" is displayed. Click on [Yes] to delete.

Renaming a pattern

Rename the design in the machine's memory. Click on the ID number, and click on "Rename." You can then type a new name not to exceed eight letters.

Please click on the OK button after inputting.

Input of new pattern name (Rename input form)

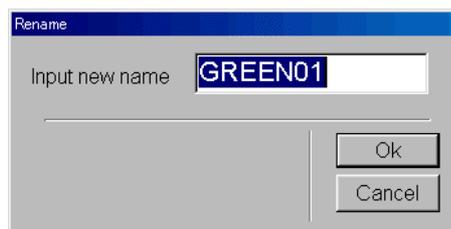

Needle selection (Needle)


You can designate the order of needles to be used for sewing.

1. You can set the needle for pattern color change.
2. You can insert a stop command in the color change process. You can make the machine stop at the stop command.

If you change the number of the needle bar after having set a color change stop, the color change stop will go off. You will then need to reset it.

3. You can set the sewing speed at the color change.

Click on "Needle selection". The input window will open.

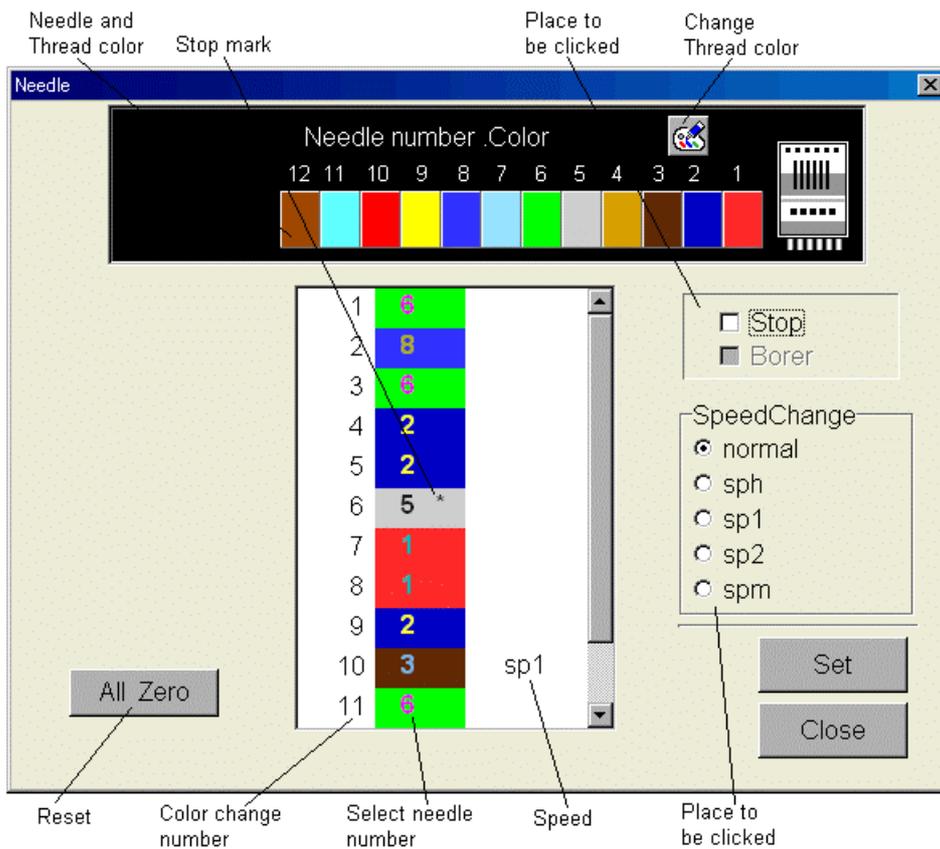

How to select:

1. Select color change number.
2. Select the color you desire from the number of the needle bars above. Please repeat this process for every color change number.

Please check "Stop" and/or "Borer" if you wish to use these functions. (Only embroidery machines that have Borers can use this function.)

3. Click on the "Set" button.

Stop

If you check the stop box after you selected the needle, an asterisk [*] will be displayed on the right side of the needle bar and a color change stop will be set.

The sewing continues to the end of the color and then stops.

Push the start button on the embroidery machine to restart.

Borer

If you check this mark, you will have a [B] symbol on the right side of the needle number. (If you use this function, you will need to install your boring device on the machine.) Please refer to [Options].

Alteration of speed

You can set a sewing speed at each color change. When you check it, the speed you set is shown.

Normal

Normal speed

sph

Cancellation of speed limit

sp1

Setting of speed limit at about 700rpm (different by machine model)

sp2

Setting of speed limit at about 600rpm (different by machine model)

spm

Setting of speed limit at about 300rpm (different by machine model)

Reset

Resets all of the needle numbers to "0" for color changes.

Other settings (stop etc.) will go off also.

Set

Puts the needle setup you selected into effect for the machine.

Close


Close "needle selection " window your Settings are not applied.

Change Thread color

You use this button for the Thread color change menu. You can change the display color that will represent each thread color.


How to change Thread color

1. Click on the  Change Thread color button to open a Thread color change menu.
2. Select and click on the needle you wish to change the color of.
3. Select from the color pallet, this will change the needle color.
4. Click on "Return" to apply your setting.

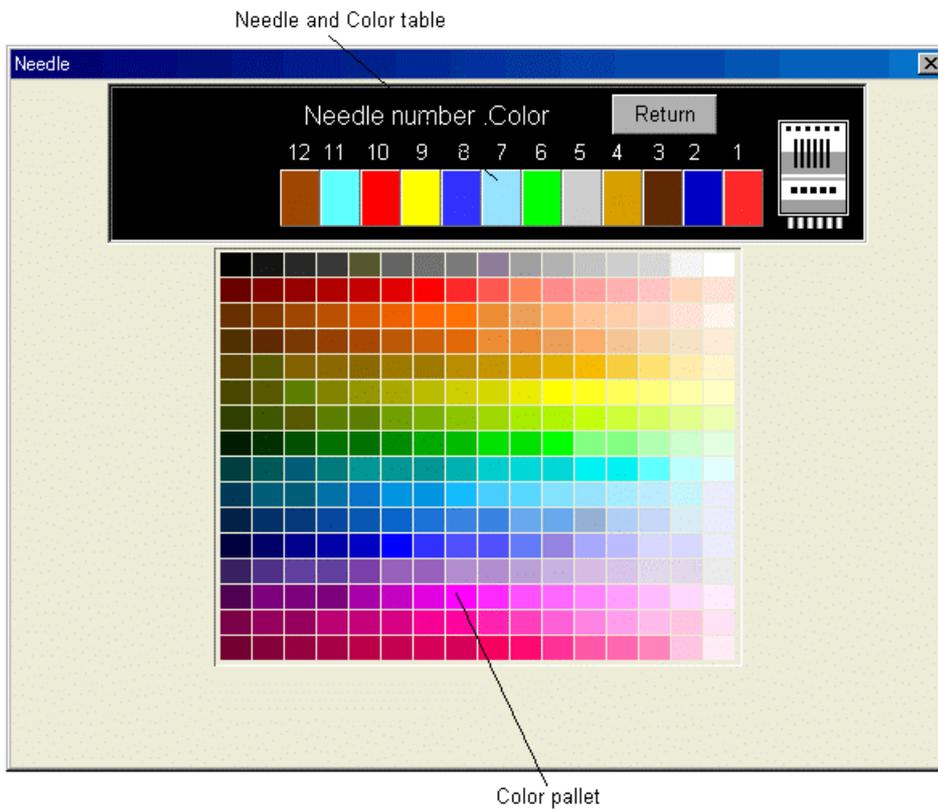

Adjust (Adjust)

Used to set (Scale), (Angle), (Width), and (Convert). Click on the Adjust button, the adjustment menu will open.

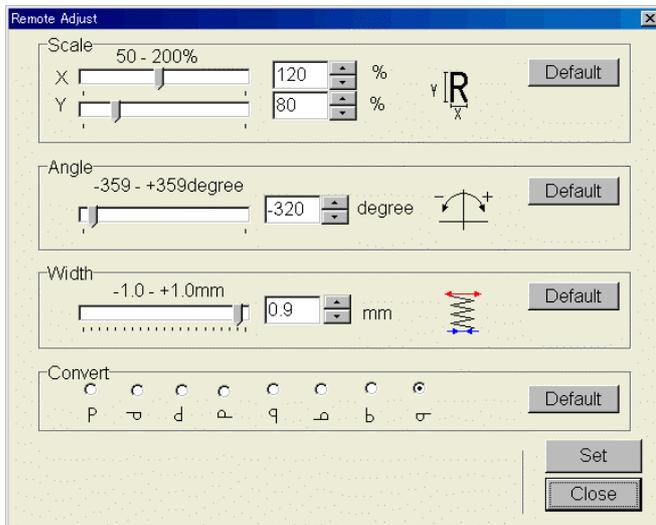

You can change the above items in the following ways:

1. Drag the Scrollbar.
2. Input data from your keyboard to the number box.
3. Click on Up/Down button with your mouse.

If you use "Convert" just click on a direction to rotate and/or mirror the design.

After you have finished inputting and click on [set], these functions will be set in the embroidery machine.

When you sew after having set the stitch width, it is possible that an error could occur at the final point.

If this occurs, please return the stitch width setting to "0.0".

[Function and adjustment]

Scale

The machine scales in X and Y directions for every 1% proportionately.

1. Scale adjust X side (Scale X) 50~200 %, Original size: 100 %
2. Scale adjust Y side (Scale Y) 50~200 %, Original size: 100 %

Angle

With the start point of the pattern as a pivot point, the design changes angle in 1-degree increments.

1. Angle: -359~359 degrees, Original position: 0 degree

Width

The machine adjusts satin stitch width in a design within range of -1.0~1.0mm in increments of 0.1 mm.


1. Width -1.0~1.0mm

Convert

Using the start point of the pattern as a pivot point, the design changes angles in 90-degree increments and it mirrors the design too.

Repeat (Repeat)

You can repeat the same design in the X and Y direction automatically. If you click on the repeat button, the Repeat menu will open.

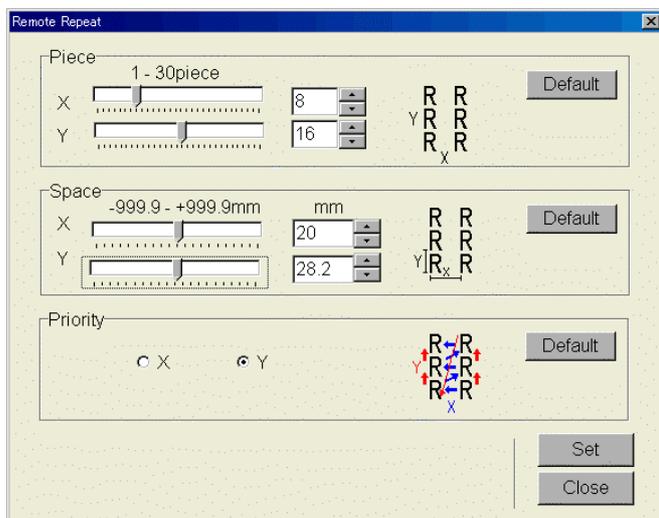

You set the number of pieces for the X and Y direction, and the space between each design, and the Priority on the start direction.

You can change the above items in the following ways:

1. Drag the Scrollbar.
2. Input data from your keyboard into the number box.
3. Click on the Up/Down button with your mouse.

After you have finished click on [Set] to load this function into the embroidery machine.

[Function and adjustment]

Piece

Set the number of pieces in the X and Y direction.

1. Pieces: X 1~30 pieces
2. Pieces: Y 1~30 pieces

Space

This sets X and Y distances between the start points of each pattern, when repeat are used. When a positive value is input, the machine sets each repeat toward the right or upward. If a negative value is used it will move to the left or downward.

1. Space: X -999.9~999.9mm
2. Space: Y -999.9~999.9mm

Priority

When sewing more than 2 pieces in the X or Y direction, a priority must be set to determine which piece to start first.

1. Priority: X - Left/Right, Y - Top/Bottom


X direction: horizontal direction is the first priority, and vertical direction will be the second.

Y direction: vertical direction is the first priority, and horizontal direction will be the second.



Offset (Offset)

The embroidery machine will start sewing after the drive frame is moved from a position where the offset is designated to the start point of the pattern. When you click on the offset button, the Offset Menu will open.

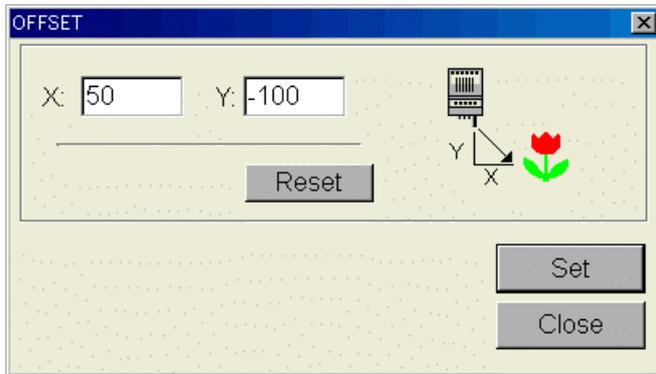


Please input numbers from keyboard.

Please set move distance to start point of pattern with start point of the drive frame as base point.

How to set offset


Example)

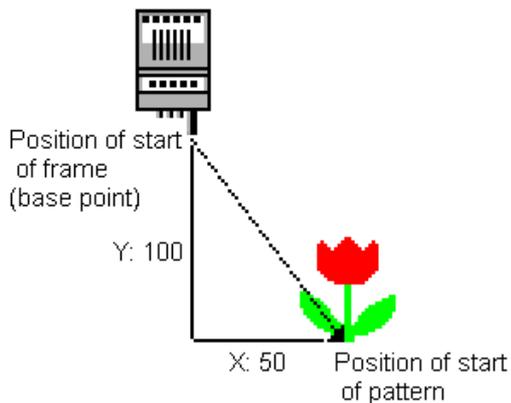

1. Please input X: 50, Y: -100.
2. After you have finished entering the numbers and click on [Set], this function will be set in the embroidery machine.

Frame out (Frame out)

After you have sewn a designated color in the pattern, the drive frame will automatically move to a frame out position to stop. When you restart it, the frame will move to the normal position and continue to work. When you click on the frame out button, the Frame out Menu will open.

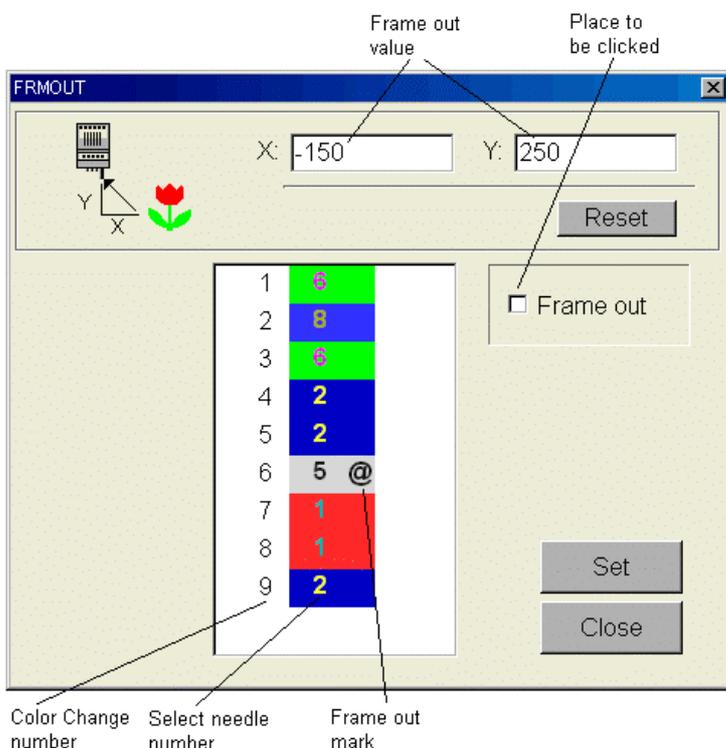


Input the frame out distance from the keyboard. Next you select a color change number and click on [Frame out]. The “@” symbol will appear on the right side of the needle number.

With the start Point of the pattern as the base point, please set the move distance to the frame out position.

How to set frame out

Example

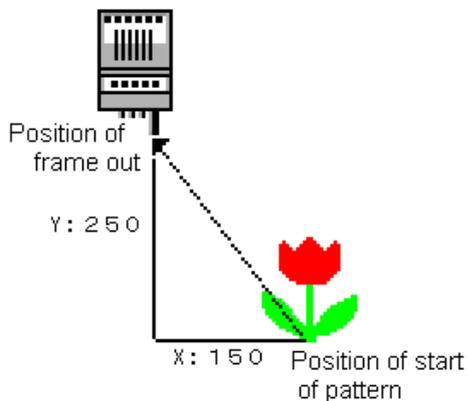

1. Please input X: -150, Y: 250.
2. Click on the color change number you want set to make the frame out.
3. Click on [Frame out]. When this function is set, an @ mark will be added to the needle bar number.
4. When you click on [Set], this function will be set in the embroidery machine.




Auto origin setting (Origin)

If you select ON, the frame returns to its original position automatically after the sewing is finished. When you click on the automatic original point return button, the Origin Menu will open.

Note:

When offset is set, this will return to the offset position.

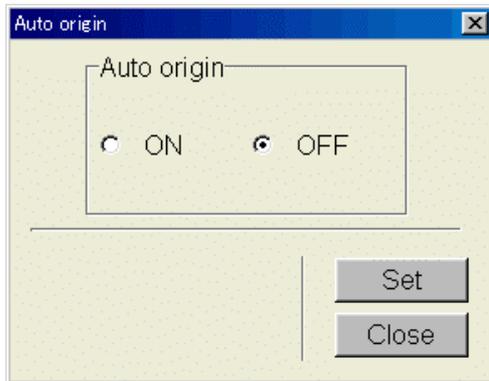

If necessary, please check ON.

When you click on [Set], this function will be set in the embroidery machine.




Locate (Locate)

Note:

(This button is gray color and you cannot use this function, when the embroidery machine does not have this ability. HCS machine does not have this ability.)

If the power source of the embroidery machine is shut off, and you changed the drive frame position; or the machine stopped due to a power outage while sewing, this function enables you to move the drive frame back to the previous position after turning the power back on.

When you click on drive frame position button, the Locate menu set scene is shown.

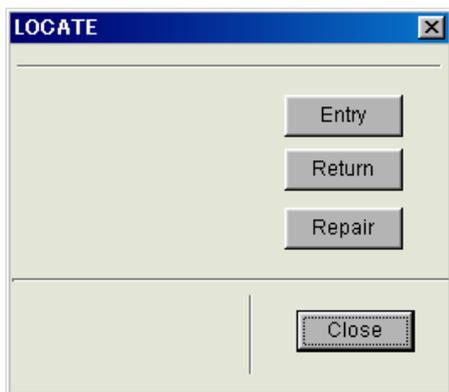

Please input the frame position by pattern and store it with the design in memory.

Caution: DO NOT USE THIS FEATURE WITH CAP DRIVER ON THE MACHINE.

[Entry]:

This is function to register original point of the present pattern.

1. Preparation of the embroidery machine:

Please determine position of original point before making registration.

- a) Please move the drive frame back to original point with the Origin button.
- b) Push "Shift" and "0" the machine to set the origin point.

2. Click on [Entry] icon. (Message: "CAUTION! (Move frame)" appears, Click on [OK].)

3. Be sure the frame path is clear. Then push the [Start] button "on the machine". (The drive frame will move to this side to the right and return to previous position to finish registration.)

[Return to Origin]: Now if you have a power failure. You can return to the origin point with "Return to ORIGIN"

1. Preparation of the embroidery machine:

Before turning the machine on, be sure the main shaft position is on "C - Point". In addition, please turn power of the embroidery machine on and press thread cut button to cut threads.

2. First, click on [Return to Origin] button. (Message: "CAUTION! (Move frame)" appears, Click on [OK].)

3. Be sure the frame path is clear, and then push [Start] button on the machine. (After the drive frame moved to this side to the right, Frame will move automatically and return to origin point.)

[Repair]:

Now if you have a power failure, you will be able to return to the previous stitch sewn.

1. Preparation of the embroidery machine:

Before turning the machine on, be sure the main shaft is on “C-point”. In addition, please turn power of the embroidery machine on and press thread cut button to cut thread.

2. Click on the [Repair] icon. (Message: “CAUTION! (Move frame)”appears, Click on [OK].)


3. Be sure the frame path is clear, and then push [Start] button on the machine. (After the drive frame moved to this side to the right, the frame will automatically move to the last stitch sewn.)



Direct (Direct)

This function moves the frame to the position, which is a stitch number or a color change number.

When you click on the Direct button, the set dialogue box is displayed.

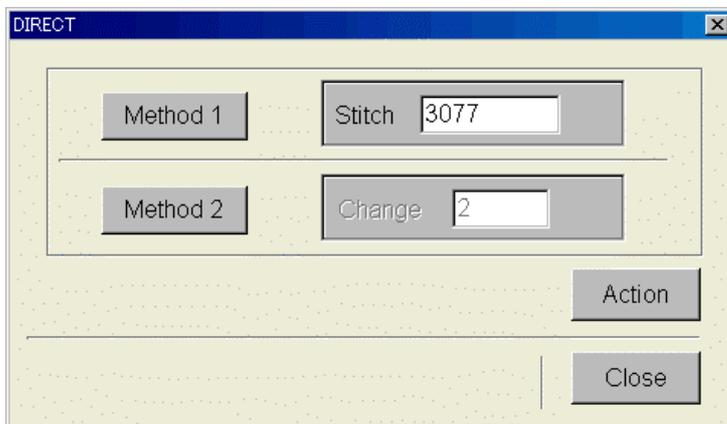

Select with button of either Method 1 or Method 2.

Method 1, By pointing out the number of stitch, the machine will move the frame to that position.

Method 2, By pointing out the color change, the machine will move the frame to that position.

Input the number from your keyboard in either way. After that, press the Action key.


The message of “Attention. Frame will move.” is displayed. Be careful, as the frame will move after clicking on [OK].

Note:

There is no setting by the repetition number.

Create (Create)

This sets the basic settings of the machine. When you click on the  create function button, the create function setting dialogue box is displayed.

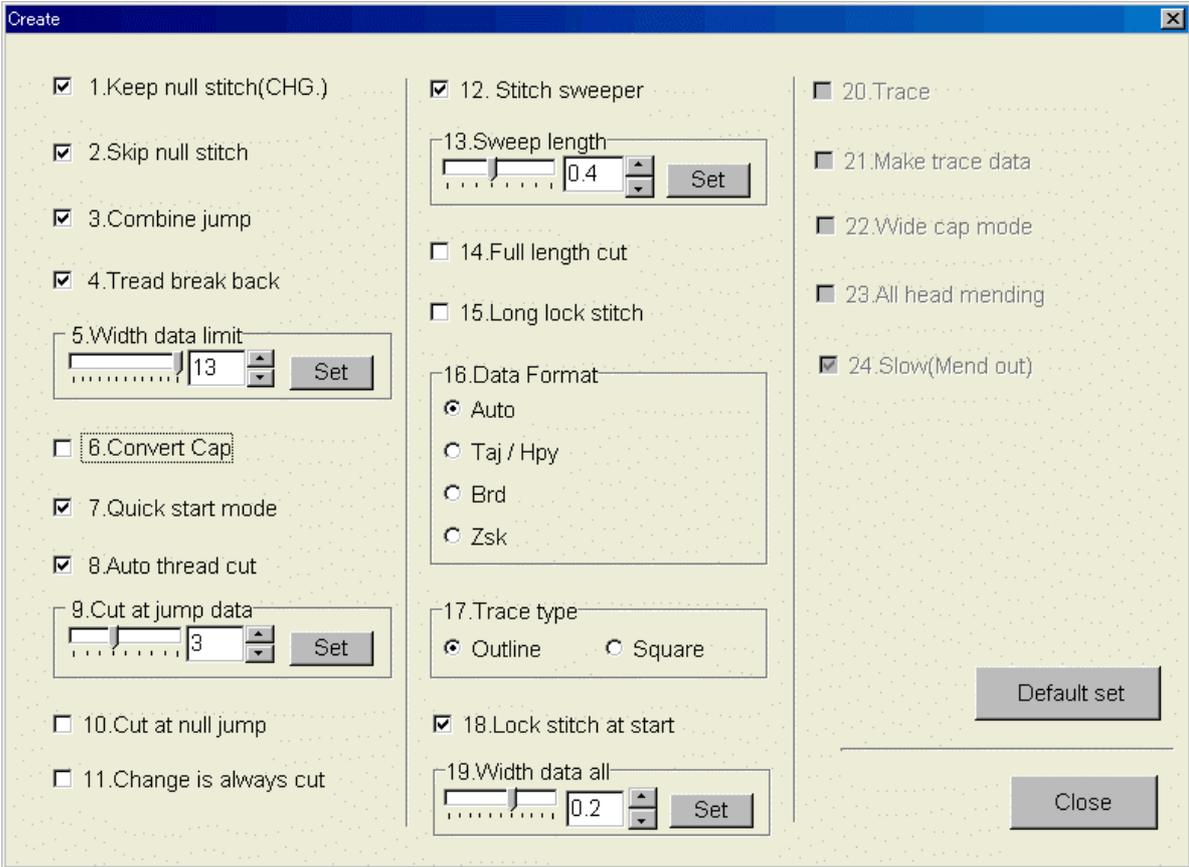

The 'Create' dialog box contains the following settings:

- 1. Keep null stitch(CHG.)
- 2. Skip null stitch
- 3. Combine jump
- 4. Tread break back
- 5. Width data limit: [Slider] 13 [Set]
- 6. Convert Cap
- 7. Quick start mode
- 8. Auto thread cut
- 9. Cut at jump data: [Slider] 3 [Set]
- 10. Cut at null jump
- 11. Change is always cut
- 12. Stitch sweeper
- 13. Sweep length: [Slider] 0.4 [Set]
- 14. Full length cut
- 15. Long lock stitch
- 16. Data Format:
 - Auto
 - Taj / Hpy
 - Brd
 - Zsk
- 17. Trace type:
 - Outline
 - Square
- 18. Lock stitch at start
- 19. Width data all: [Slider] 0.2 [Set]
- 20. Trace
- 21. Make trace data
- 22. Wide cap mode
- 23. All head mending
- 24. Slow(Mend out)

Buttons: Default set, Close

You can change these settings by clicking on each. If you need to input data, you can input from your PC or by adjusting the slide bar or Up/Down button in the menu. Note some items require set to be clicked on to activate them. Click on "Close" to go back to the previous menu.

You can click on [Default set] to change all items to their default values.

1. Keep null Stitch (CHG.)

When the machine reads the data, it reads all jump stitch data including the jump stitches that are sewn before a color change.

Null stitches are stitches that have no movement.

2. Skip null stitch

When the machine reads the data, it reads only jump stitches that are sewn before the color change or that have movement. When reading in pattern data, the machine reads all data except for jump stitches other than jump stitches before a color change.

3. Combine jump

When the machine reads the data, if there is a series of jumps, it will combine the series of jumps into one movement after adjusting the data to be less than 12.7 mm.

4. Thread break back

When the thread breaks, the frame moves back a few stitches and then the machine stops.

5. Width data limit

This controls the maximum stitch length to 13mm at the default. If a stitch exceeds 13mm, it will then turn into a jump stitch to reach full stitch length. This number should be lowered if you are using caps or heavy garments.

6. Convert Cap

When the cap drive is installed in the embroidery machine, the machine will turn the design upside down.

(Only for embroidery machines with this function)

7. Quick start mode

After thread cut, or

After three stitches, the machine speed increases.

If not three stitches then after five stitches, the machine speed increases.

8. Auto thread cut

Automatically cuts when a trim code is detected.

9. Cut at jump data

When a series of continuous jumps exists in the design data; for example, three jumps, the machine will trim the thread before the jumps.

10. Cut at null jump

If there is one stitch of null (empty) jump in the design data and more than one stitch of jump thereafter, the machine will trim the thread before the null jump.

11. Change is always cut

This will force machine to cut at any color change, even if there is not a trim code inserted at the end of the color. Then the machine will trim even if the color change is set to the same needle.

12. Stitch sweeper

When the machine reads the data, it removes extremely short stitches that can cause thread breaks.

13. Sweep length

The width of the stitch sweep. Stitches shorter than the specified length or width will be removed.

14. Full length cut

The machine trims upper thread to a longer length.

15. Long lock stitch

Sets the lock stitch length longer.

16. Data format

Determines the data format when the machine reads the data disk or design.

The default setting is “Auto,” but you can select others if the design could not be read correctly, and read the data again.

Auto : Automatic judge (Normal setting)

Taj / Happy : Tajima, Happy Trinary data type

Brd : Barudan Binary data type

Zsk : Zsk Binary data type

17. Trace type

Select design trace type.

“Outline” which will show the rough outline or maximum size of the design or

“Square” this moves the frame in a square around the maximum design area.

18. Lock stitch at start

Machine inserts a lock stitch before and after a thread trim automatically.

19. Adjust width all pattern

Puts width data limit setting into effect for all designs.

It adjusts the width of the satin stitches for all patterns that are saved in the embroidery machines memory. It becomes the first priority. (Rather than stitch width of [adjust].)

20. Trace

(Design trace)

By outlining the pattern or its maximum size, and moving the frame, you can check the actual size and its position. Select “Make trace data” to trace.

(Only for an embroidery machine with this function.)

21. Make trace data

Build design trace data.

This function will make the trace data when the machine reads the pattern into memory.

Select “Make trace data” to be able to use the trace feature.

(Only for an embroidery machine with this function.)

22. Wide cap mode

You must use this setting to sew caps on the machine. The machine makes sewing control suitable for using the wide cap frame. (Only for an embroidery machine with this function – not HCS)

23. All head mending

This feature is designed only for multi-head machines, if it is set to “NO” only the head with the thread break will mend. If it is set to yes all heads will mend at a thread break.

(Only for an embroidery machine with this function.)


24. Slow mend out

For multi-head machines, when mending finishes and all heads start to sew again, the machine speed decreases to help the first few stitches be sewn.

(Only for an embroidery machine with this function.)

3. In case the speed stitch display switch button is pressed

The tool buttons are indicated as follows.

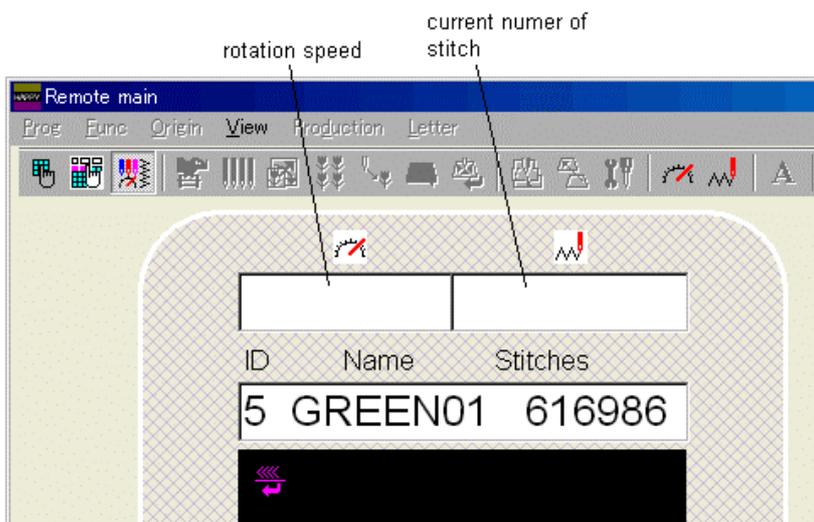

Rotation speed indication (Speed)

Display the rotation speed of main shaft in the machine, (r.p.m.) when you press this button.
At this time, a BEEP sound is heard at regular intervals.


Stitch Counter (Stitches)

Display the current number of the stitch being sewn when you press this button.
At this time, a BEEP sound is heard at regular intervals.

Please click on [Close], [frame operation button] or [machine setting operation button] to cancel these functions.

Letter (Letter)

The embroidery machine has characters stored in it. When you click on the Character sewing button, the character sewing setting dialogue box appears.

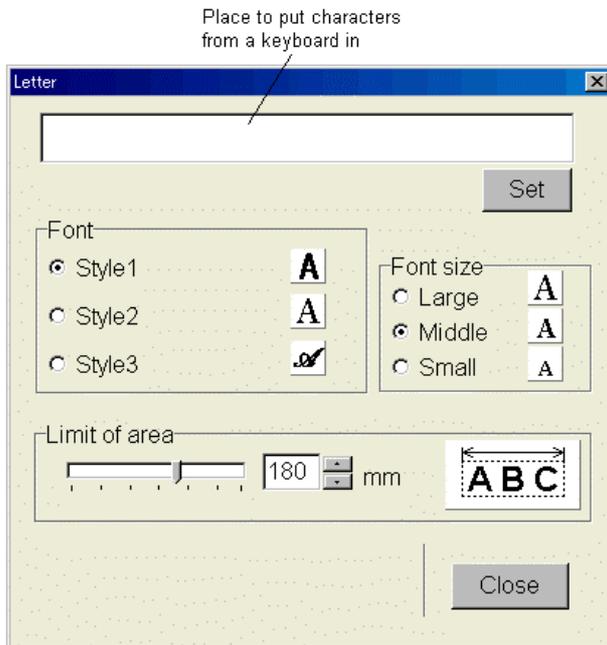

You need to determine the proportions of the font and the size of the characters as well as the length of a line.

Please input characters from the keyboard. You can put in up to 15 characters maximum.

Regarding which characters you can input please refer to the instruction manual for your embroidery machine.

When you click on [Set], it will be set in the embroidery machine. The characters are saved as the pattern in the machine. In Addition, the name of the pattern is the first eight characters typed.

When the length of a line is larger than that designated by the area selection, an error message (Area Over) will appear. In such a case, reduce the number of characters; lengthen the line or both to clear the error. (Refer to the instruction manual of the machine, too.).

Explanation of items to be selected

Selection of font (Font)

Selection is to be made from Style1, Style2 and Style3.

Selection of size (Size)

Large 15mm

Middle 10mm

Small 4mm

Selection of area (Area)

This is to determine the line length (0 - 290mm) of the characters.


Note: When the area is set to 0, the space between the characters will become 0.8mm.

Data send Mode


You can send designs that are saved in the PC or on a diskette to the embroidery machine in this mode. You can adjust the designs settings in the PC, and send it to the machine with the design.

You can make minor edits to the design.

When this software is started, the mode is [data send mode] and is shown as illustrated below.

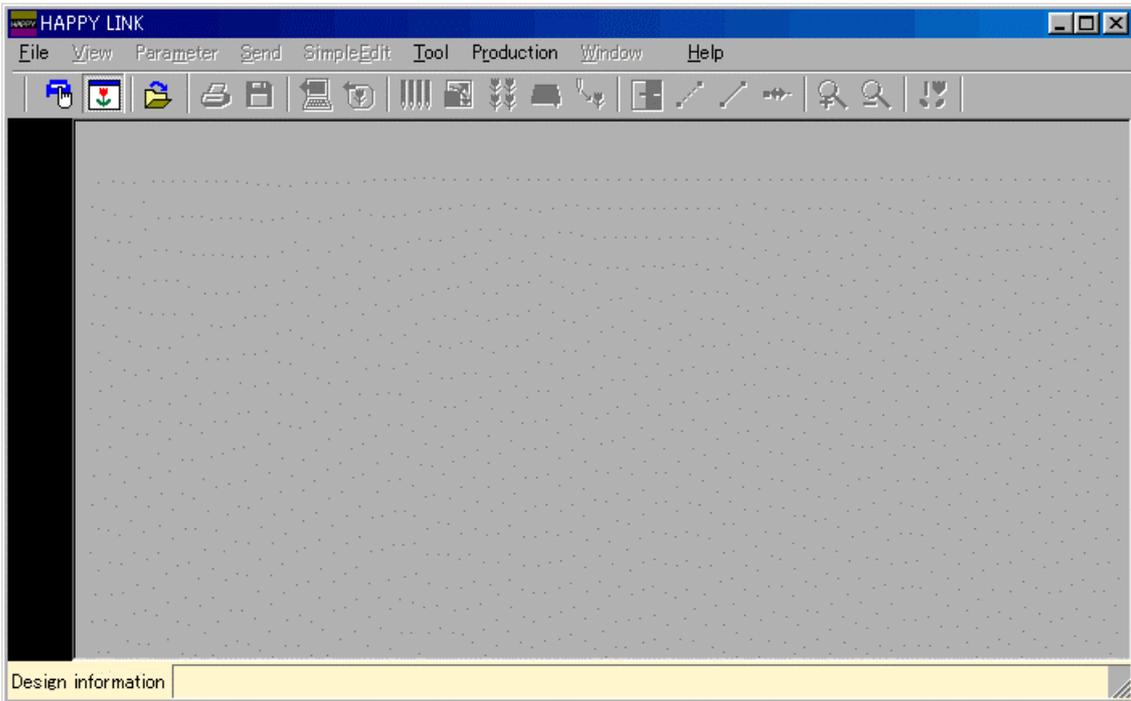

After reading the design, you can use the menu and tool buttons.

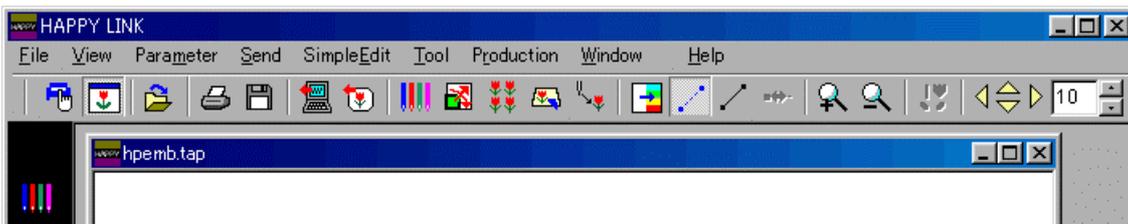

Please select "Pattern Input" to select the pattern data in the PC.

After reading the data, you can set "Needle selection," or "adjust pattern," and send the pattern to the embroidery machine.

Options in this menu

1. Open design

This function reads embroidery data stored in the personal computer or on a diskette and displays them.

2. Needle selection

This function sets the order of needles to sew. At every color change, the machine changes to the next set needle.

3. Design adjust

This function sets parameters for scaling, rotation and reversing etc.

4. Repeat

This function enables the user to sew the same pattern multiple times on the same cloth.

5. Frame out

After having sewn the designated color, this function moves the drive frame to a position previously designated. This function is used when you want to take care of something in the middle of sewing.

6. Offset

Allows you to set the machine to have a starting position in which the frame may be located offset from the actual position that stitching will begin. This allows for easy loading of the frame into the machine.

7. Simple editing

This function is to do simple data editing of stitches of pattern data, such as deletion, moving, or addition of a function, etc.

8. Send design data with functions to the machine

This function transmits the pattern with the settings of needle color changes and edit settings etc. into the embroidery machine.

9. Save design data with functions

This function saves the pattern with the settings of the Needle selection and the Simple editing, etc. in the personal computer or on a floppy disk.

10. Changing background color

This function enables you to change the background color (cloth color) of pattern.

11. Frame Check (Transmission of data after confirming the pattern in the drive frame)

Using this function, you can confirm the pattern's position in the drive frame with the display. You can also move of the drive frame, if you moved the frame in the display. Then, the pattern with the settings of needle color changes and edit settings etc. is transmitted to the embroidery machine.

12. View the production data

Production data is displayed.

13. Print selected design

You can print the selected design.

14. View the selected block by color

Only the color block of the current stitches in [simple editing] is displayed.

Explanation of tool buttons



Switching to operation mode



Data send mode

(On start-up of this software, it is the data send mode.)



Open design



Print selected design. Click on this icon to open the print menu



Save design data (Save in HAPPY style)



Send design data with function to the machine



Frame Check (Transmission after having confirmed with the drive frame)



Needle selection



Design adjust



Repeat



Frame out



Offset



Changing background color



View jump (Show every jump in the design)



Stitch Point (Show stitch points by dot)



Change the size of the stitch point (effective after needle drop point was displayed)



Zoom in



Zoom out



View the selected block by color (Effective only at time of editing)

About the Indicator

A black frame on the left side of the screen is the indicator.

An icon is displayed here when using “Needle selection”, “Design adjust”, “Repeat”, “Simple editing”.

Needle selection



Design adjust (Scaling etc.)



Repeat



Frame out



Offset



Simple editing




Usage (Data send mode)

Open design

Select the pattern that you want to sew from the data in the PC, and read it.

Open the data from your computer, CD or Floppy disc.

The pattern that is read appears in the window. (The following illustration)

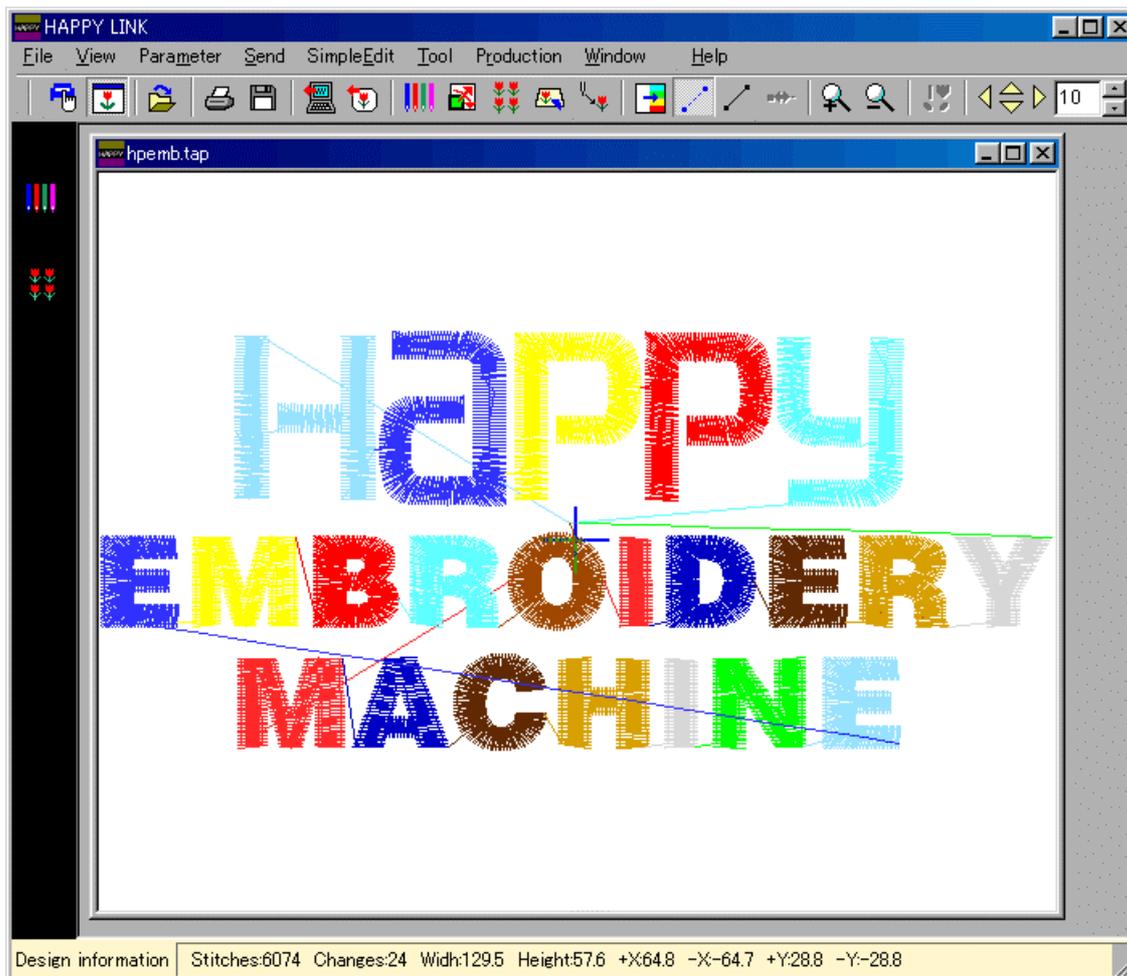

Note:

The pattern will be shown in program window after adjusting its size. If a pattern is read after maximizing the window, the patterns' view size will be expanded.


The pattern that is read before maximizing the window will not be changed even if you maximize the window size. If you close the window, and open it again, the viewing size will be adjusted to the window size.

Reading (2 ways)

1. Open the pattern file select dialog box, and select the pattern from the list.
2. It is also possible to drag and drop from Windows Explorer.

1. Pattern open dialog

Open design menu by this button.

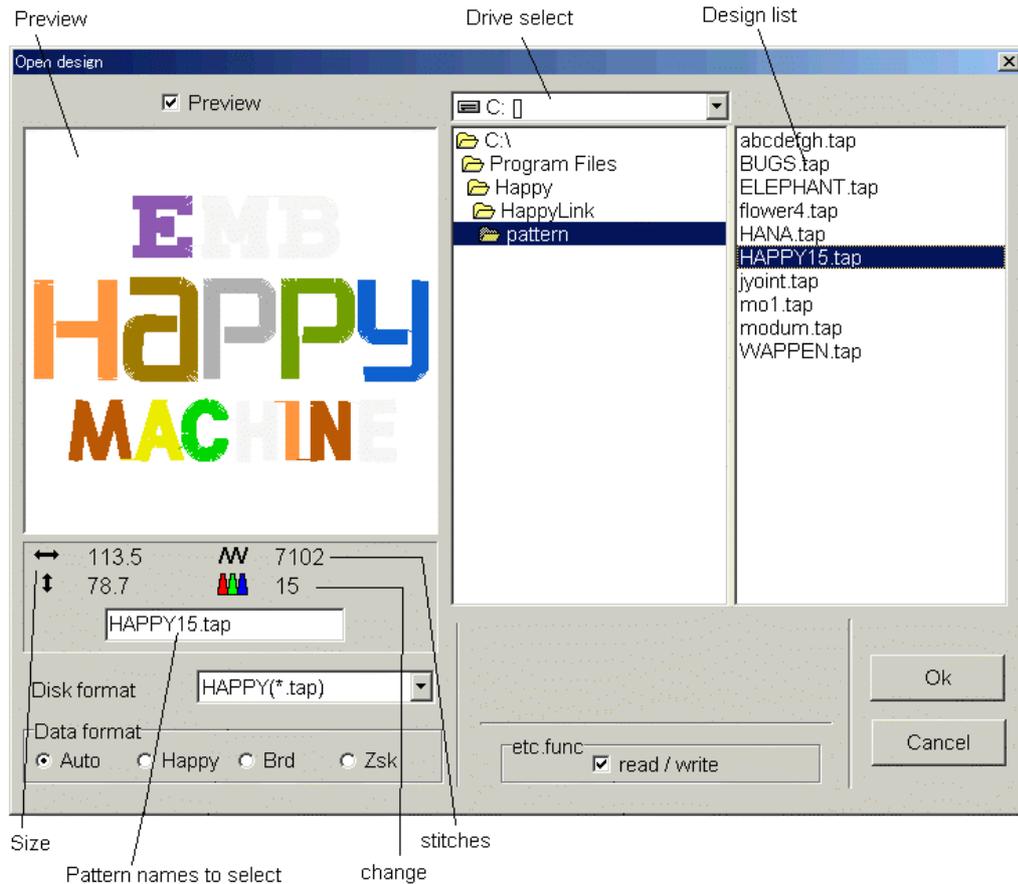

Reading a design is done by the following process.


1. Select Disk drive and double-click on the “Pattern Folder” that contains the design.
2. Select the desired design and you will see a preview, if the preview box is checked.
3. Click on the [OK] button to choose the design you selected.

You can open HAPPY (.tap) and TJM (.DST .DSB .DSZ) only.

Please select your type of disk format. (Usually “HAPPY (*.tap)”)

Note: If you cannot open a design properly, please change the [Data format] select from [Auto] to [Brd] or [Zsk]. Then, try to open your design again.

If you selected a very large design, it could take a while to load. To avoid the wait, remove the check from the preview box.

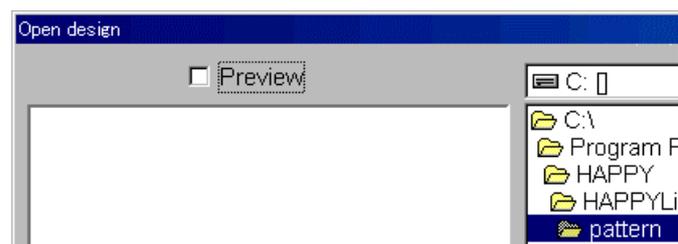

2. Drag & Drop


By dragging the pattern data from Explorer and dropping into the Happy Link window, you can open the pattern.

HAPPY (*.tap), and TJM (*.dst)(*.dsb)(*.dsz) are available.

Note:

Please don't drag and drop the pattern data into the HAPPY Link icon on the desktop. It does not work.

About etc.function option read/write

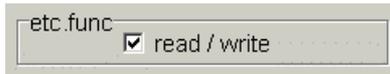

If it is checked

All settings of [Needle selection], [Design adjust], [Repeat], [Frame out] and [Offset], can be stored to the [Happy original setting file] .

When reading a design, settings that are saved can be read with the pattern. Therefore, the settings of [Needle selection], etc. do not need to be set again.

When sending design data, settings that are saved can be sent with the design pattern.

If it is not checked

The settings will neither be saved nor sent. It does not read any settings that were saved previously, either.

Note:

The following message is displayed after the pattern is sent, if [etc.func option read/write] is not checked or, although it is checked, a [Happy original setting file] has not been created yet.



(It was unable to send a setting.)


Design information

Displayed design information

Marker (Cross cursor)

Shows your selected stitch point. (In pattern image in editing)

If the design is not being edited, the beginning of the pattern data is displayed.

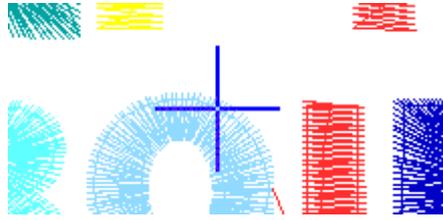

Design information	Stitches:3293	Changes:3	Width:154.2	Height:32.3	+X:77.1	-X:-77.1	+Y:23.8	-Y:-8.5
--------------------	---------------	-----------	-------------	-------------	---------	----------	---------	---------

Showing at the bottom of the screen.

[Stitches]

Showing the total number of stitches in the design

[Changes]

Showing the number of color changes in design.

[Width]

Showing the X size (left to right) of the design.

[Height]

Showing the Y size (top to bottom) of the design

+X

Showing right side length from the origin point of the design.

-X

Showing left side length from the origin point of the design.

+Y


Showing upper side length from the origin point of the design.

-Y

Showing lower side length from the origin point of the design.

Print selected design


You can print the selected design. Click on this icon to open the print menu.

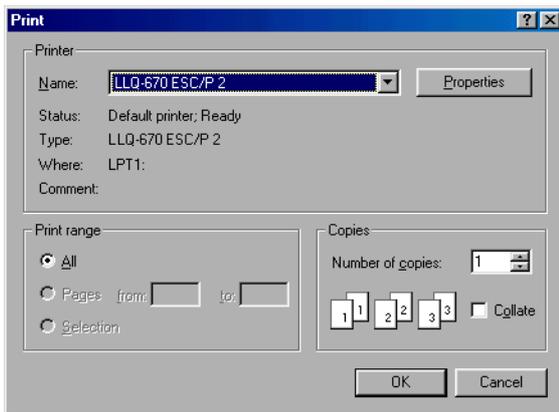

Contents of print:

1. Pattern name
2. Stitches
3. Color
4. Width
5. Height
6. Indication by color block and stitches
7. Print of the pattern design

An example of a print is indicated as follows.

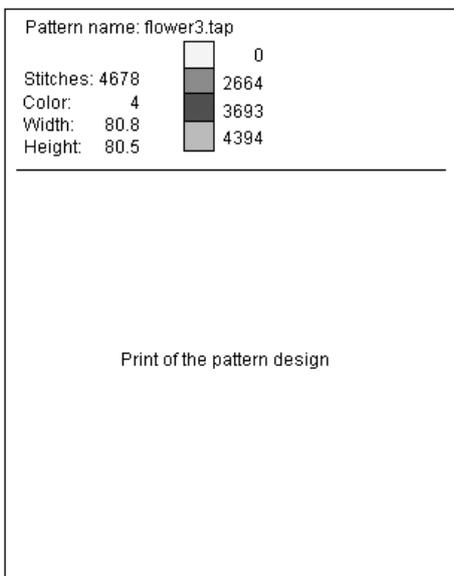

Note:

The detail settings of the printer are changeable if you click on [File] - [Printer setup] in menu bar.
The indicated screen of the print menu or property of the driver varies by the printer driver used with the PC.

Save design data

You can save the currently selected design data.


Note:

If [etc.func read/write] in the Open design is checked, the settings of [needle selection] etc. will be saved automatically.

DST format will be converted to Happy format and saved.

If you name this setting with the same name as the original file, it will replace the original file. Please backup the original data before editing.

If you click on this icon, a file name input dialog will appear.

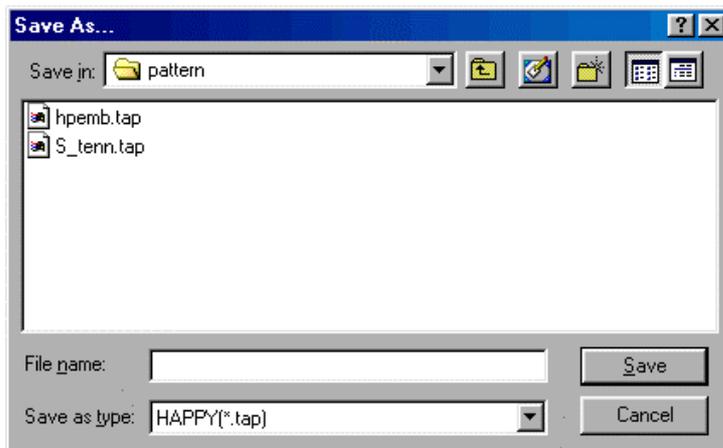

Select a drive and folder that you wish to save the design to. Then, input the name and click on [save].

Note:

You cannot save the data on CD-ROM or CD-R.



Send design data

Sends the design data to the embroidery machine. (A design must be open for this menu to open.)

Please make sure the embroidery machine is ready to accept the data before sending the data to the machine.

Note:

If [etc.func read/write] in the Open design is checked, the settings of [needle selection] etc. will be sent with the design. The number of stitches of the pattern in the embroidery machine (which is compatible with the HappyLink) will increase more than the stitches of the design because the stitches of the [Trace data] are added.

For information about [Trace data], refer to the [Trace type] in the Instruction manual of the embroidery machine.

Preparation for reception of the data on the embroidery machine side.

Please refer to the Instruction manual of the embroidery machine to know whether it has an auto-serial function or not. Any embroidery machine, which is compatible with HappyLink, has auto-serial function.

If the auto-serial function is installed in your embroidery machine

You need to set the embroidery machine to the [drive mode] (which is the mode you can start sewing in the embroidery machine). For information about the [drive mode], refer to the Instruction manual of the embroidery machine.

This setting data will be sent with the pattern data.

If the auto-serial function is not installed in your embroidery machine


Please accept the data with Tape input setting.

Please follow instructions below for Tape input setting.

Note:

Please deselect read/write box in “etc. func.” If you have already opened your pattern, close it and re-open it as above.

If the read/write box is selected, an error will occur.

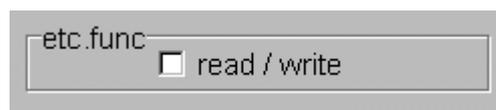

Note:

You must make the communication speed [baud rate] correspond in all the machines and PC. Refer to the [Serial port setting].

Transmission of a pattern

Click on this button or “Send” in the menu bar to send the design to the embroidery machine.


The following message is shown and the pattern is not sent, if the cable is not connected or the embroidery machine side is not ready. Click on [OK].




(A connection is cut off!)

Note: In USB, “Macine is busy.” is shown.

Progress conditions are indicated with the [progress bar] in the middle of the transmission.

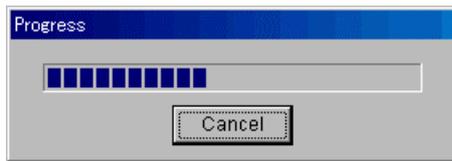


When the transmission is over, the following message is shown.

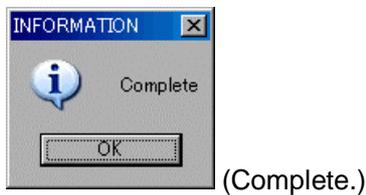


Note:

The following message is shown after the pattern is sent, if the [etc.func option read/write] is not checked or although it is checked, the [Happy original setting file] has not been created yet.

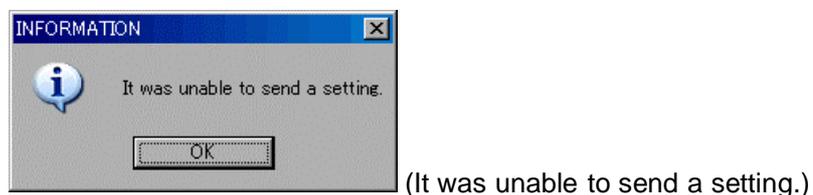

In this case, the name of the transmitted pattern is the eight characters of the number of total stitches. For example, the name saved in the embroidery machine is [2604], if the total stitches are 2604.


The transmission will be canceled when you click on "Cancel" during the transmission. Then, click on [OK] as the following message is shown.

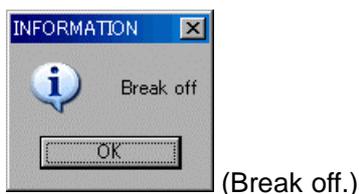

Note:

Error: E-090 is shown and data is not received by the embroidery machine, when you send the design if the communication speed (Baud rate) is different with the PC and the embroidery machine. Click on "Cancel" in the [progress bar], as the transfer is continued to the end by the PC.


The following message will be shown if the amount of memory of the embroidery machine is exceeded during sending of pattern data. (The pattern is not sent) Delete some designs from memory and re-send the design.

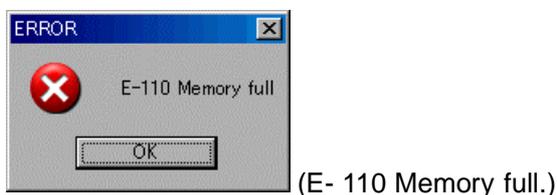

Frame check

You can check whether the design will fit in the frame size on the display in PC. Then you can move the frame on the display and click on [set]. The drive frame will move to the set position and the design pattern data will be sent to the machine.

When you click on the [Transmission of data after confirming pattern and the drive frame] button, the scene opens for checking. (Or [Send] - [Frame check] in the menu bar.)

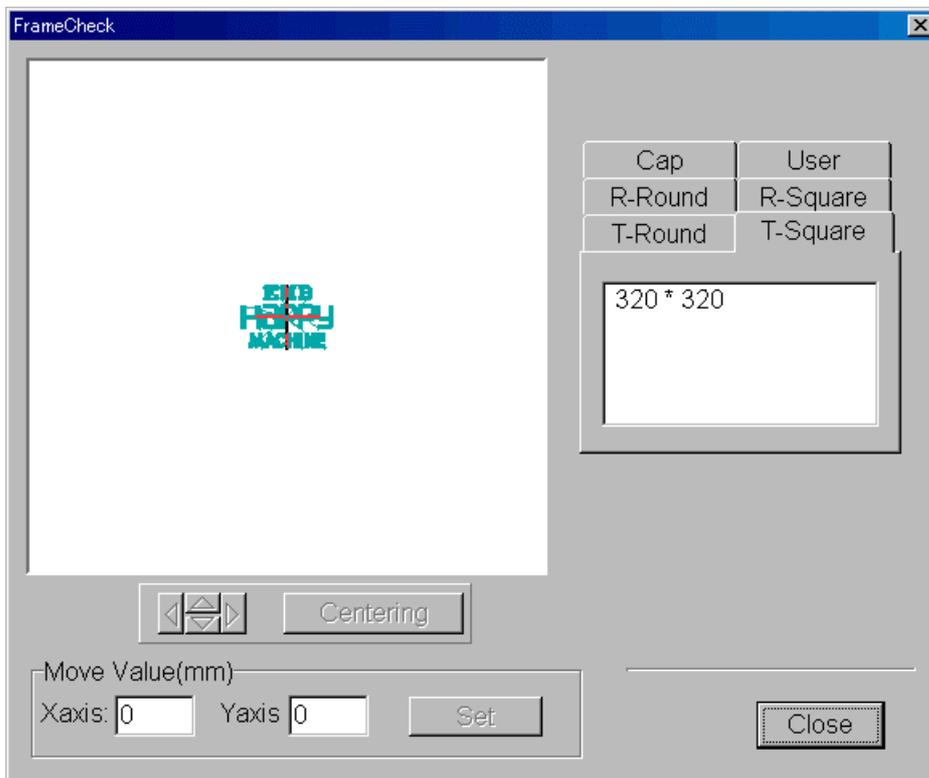

Frame:

- R-Round: Regular round
- R-Square: Regular square
- T-Round: Tubular round
- T-Square: Tubular Square
- Cap: Cap frame
- User: User's frame


Note:

Any frame, which cannot be used in the embroidery machine, is not shown.
The frame size that appears will be adjusted to show the allowable stitching area.
You can save five of your own frame sizes in "User."
Please click on "Close" to finish FrameCheck in the middle of the work.
If [etc.func read/write] in the Open design is checked, all settings of [needle selection] etc. will be sent with the design to the embroidery machine.
Please take care to check that the [presser foot] doesn't hit the drive frame when tracing when you start sewing. Please refer to the [Trace type] in the Instruction manual of the embroidery machine about the [Trace] function.

How to check and set

1. Select the frame you expect to use in the embroidery machine from the list.

After deciding on the frame, please select it from the frame size list and click on it. The present position of the frame on the embroidery machine is displayed on the screen.

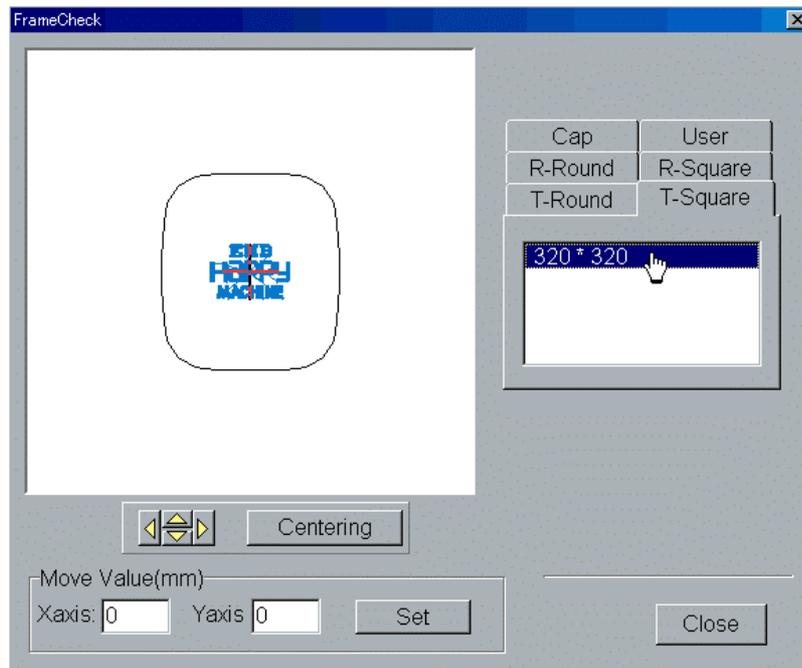

At this moment, if the pattern is larger than the frame, you can't use it. Please use a bigger frame or use a smaller pattern.

Please refer to [Design Adjust].


2. Move the frame on the screen. (The frame on the embroidery machine stays motionless).

Please keep pressing  and move the displayed frame to a position you desire.

When you stop pressing the button, the displayed frame will also stop.

In addition, when you click on [Centering], the center of the frame will move to the center of pattern.

As the frame moves, the display of the distance from the first position of the frame changes.

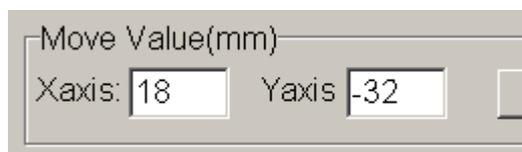

Note: Please take care not to have the pattern go beyond the frame. The needles will hit the frame and the embroidery machine could be damaged.

3. Transmit the design data.

Click on the set button.




4. The following message is shown. The moving value of the frame will be sent to the embroidery machine.



(Attention! Frame will move.)

When you click on [OK], please be careful as the drive frame on the embroidery machine will move.

5. Another message is shown.

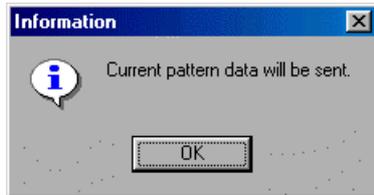

(Current pattern data will be sent.)

When you click on [OK], the design data will be sent to the embroidery machine.

6. When the transmission is finished, the following message is shown.



(Complete.)

When you click on [OK], "FrameCheck" will be finished.

Note:

The following message is shown after the pattern was sent, if [etc.func option read/write] is not checked or although it is checked, the [Happy original setting file] has not been created yet.




(It was unable to send a setting.)

Refer to the [Send design data] about the transmission of a pattern.

User's frame

You can see the User list by selecting the User tab.

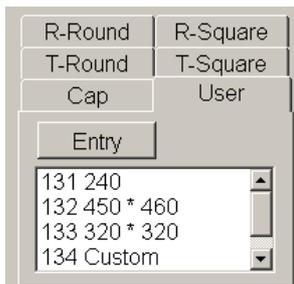

You can save five of your own frame sizes in "User."


You can input your own frame size. (An unregistered portion is displayed as [Custom].)

Input or Change

After clicking on the list that you want to change or input, click on the Entry button. The Input form will be opened. Select one from round frames or square frames, and input the number. After inputting, entry finishes upon clicking on [OK].

Round frame

Please input the inner diameter of the frame. (Please downsize it by 40 mm from the actual frame size to prevent the needle or presser foot from hitting the frame.)

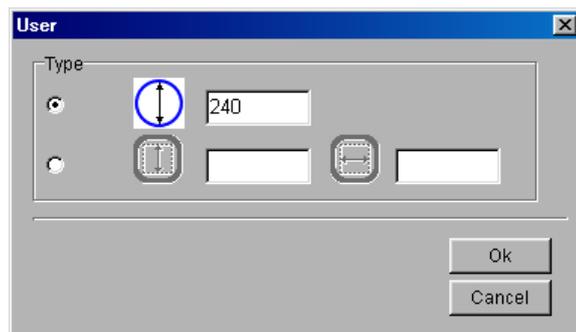

Square frame.


Please input the inner length and width of the frame. (Please downsize it by 40 mm from the actual frame size to prevent the needle or presser foot from hitting the frame.)



Vertical bore in the frame




Horizontal bore in the frame

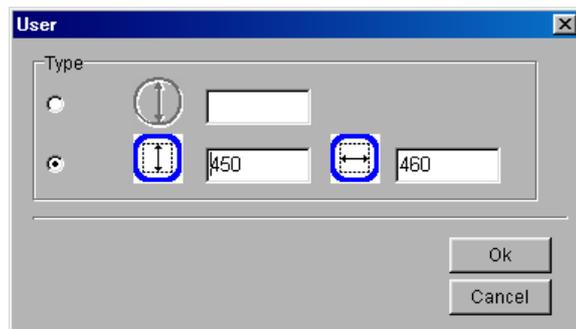

To clear the input number, and return to custom display.

Please put "0", and click on "OK."

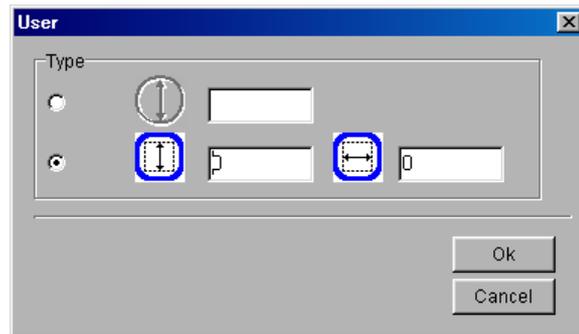

Note:

When you input nothing, the following message will be indicated.



Needle selection


You can designate the order of needles to be used for sewing.

Note:

If [etc.func read/write] in the Open design dialogue box is checked, the settings of [needle selection] will be saved automatically.

1. You can set the needle for pattern color change.
2. You can insert a stop command in the color change process. You can make the machine stop at the stop command.
If you change the number of the needle bar after having set a color change stop, the color change stop will go off. You will then need to reset it.
3. You can set the sewing speed at the color change.

Click on “Needle selection”. The input window will open. (A design must already be opened, or this key will not be active.)

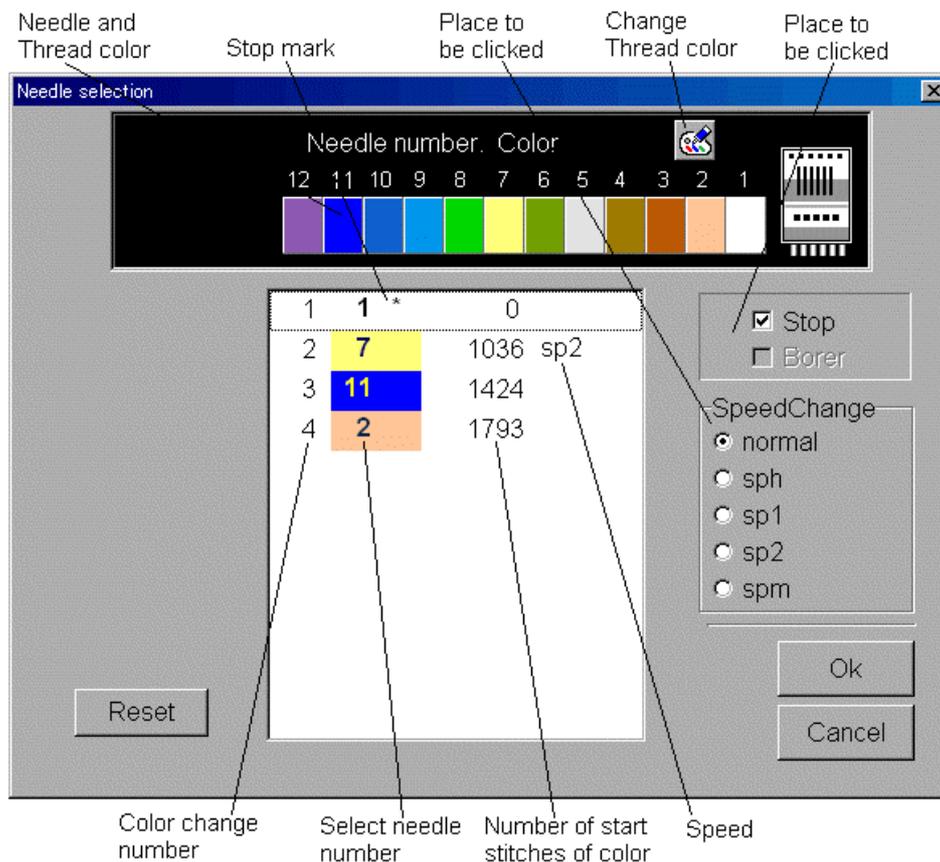

How to select:

1. Select color change number.
2. Select the color you desire from the number of the needle bars above. Please repeat this process for every color change number.
Please check “Stop” and/or “Borer” if you wish to use these functions. (Only embroidery machines that have Borers can use this function)
3. Click on the “OK” button.

Stop mark

If you check the stop box after you selected the needle, a [*] mark appears on the right side of needle number and color change stop is set.

Sewing proceeds, but the embroidery machine will stop when this color has completed sewing.

Push the start button on the embroidery machine to restart.

Borer

If you check this mark, you will have a [B] symbol on right side of the needle number.

If you use this function, you need to install a borer device to the machine. Please refer to [Options].

Alteration of speed

You can set the speed of the embroidery machine at every change. The set machine speed is displayed.

Normal

Normal speed

sph

Release of speed limit

sp1

Setting speed limit at 700rpm (different by machine model)

sp2

Setting speed limit at 600rpm (different by machine model)

spm

Setting speed limit at 300rpm (different by machine model)

Reset

Reset all of your needle numbers to "0" for color changes.

Other functions (stop etc.) will all go off.

OK

Input contents are saved in the [Happy original setting file].

Cancel


Without saving the input contents in the [Happy original setting file], the screen will be closed.

Change Thread color

You use this button for the Thread color change menu. You can change the display color that will represent each thread color.

How to change Thread color

1. Click on the  Change Thread color button to open a Thread color change menu.
2. Select and click on the needle you wish to change the color of.
3. Select from the color pallet, this will change the needle color.
4. Click on "Return" to apply your setting.

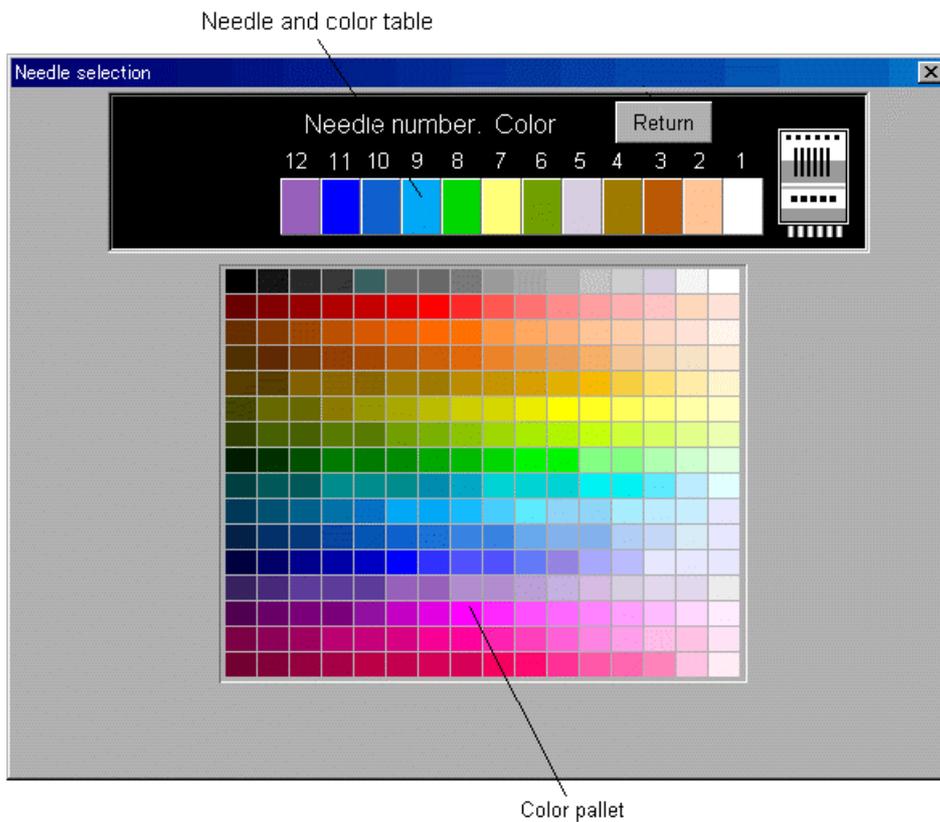

Design adjust


You can set the scale and alter the selected pattern. (Sewing data doesn't change itself. The data is changed only for sewing.)

Note:

If [ect.func read/write] in the Open design is checked, settings of [Design adjust] will be saved automatically.

Click on this button to open a Design adjust menu in the Data send mode.

(A design must be open for this to work.)

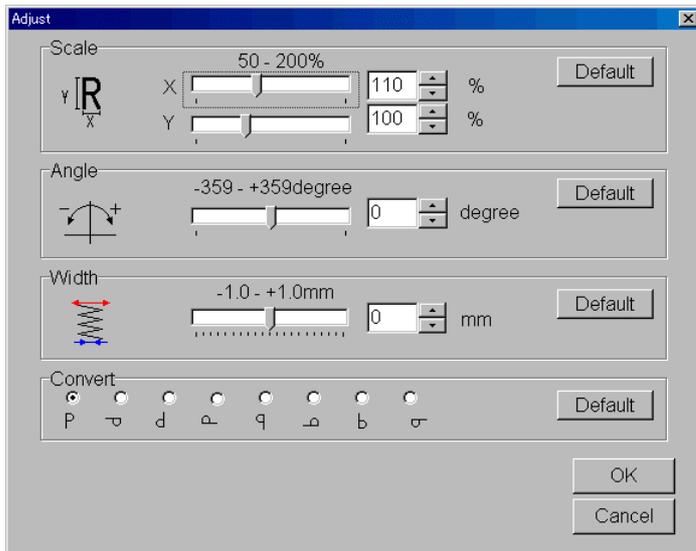

You can change the above items in the following ways:

1. Drag the Scrollbar.
2. Input data from your keyboard into the number box.
3. Click on Up/Down button with your mouse.

If you use "Convert" just click on a direction to rotate the design.

You will get the standard settings back by clicking on [Default].

Click on [OK] after having input. This menu will be closed.

When you sew with width adjustment setting, an error may occur at the end point.

In this case, please return the stitch width setting to "0.0".

[Function and adjustment]

Scale

The machine scales in X and Y directions for every 1% proportionately.

1. Scale adjust X side (Scale X) 50~200 %, Original size: 100 %
2. Scale adjust Y side (Scale Y) 50~200 %, Original size: 100 %

Angle

With the start point of the pattern as a pivot point, the machine changes the angle in 1degree increments.

1. Angle: -359~359 degree, Original size: 0 degree

Width

The machine adjusts stitch width in a design within range of -1.0~1.0mm in increments of 0.1 mm.

1. Width -1.0~1.0mm


Convert

Using the start point of the pattern as a pivot point, the machine changes the angle in 90-degree increments and it mirrors the design.

Repeat

The machine automatically embroiders a specified number of pieces in X and Y directions. If [etc.func read/write] in the Open design is checked, they will be saved automatically.

Click on this button to open the repeat menu in the Data send mode.
(A design must be open for this menu to open.)

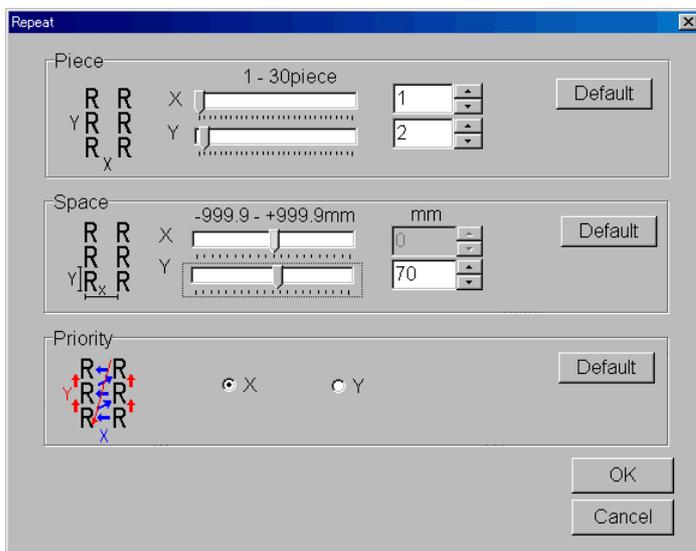

You can change the above items in the following ways:

1. Drag the Scrollbar.
2. Input data from your keyboard into the number box.
3. Click on Up/Down button with your mouse.

In the [Priority], please click on the button for the direction you prefer.

You will get the standard settings back by clicking on [Default].

Click on [OK] after having input. This menu will be closed.

[Function and adjustment]

Piece

Set the number of pieces in the X and Y direction.

1. Pieces: X 1~30 pieces
2. Pieces: Y 1~30 pieces

Space

This sets X and Y distance between the start point of each pattern, when repeat is used.

When a positive value is input, the machine makes repeat toward the right or upward. If a negative value is used it will move to the left or downward.

1. Space: X -999.9~999.9mm
2. Space: Y -999.9~999.9mm

Priority

When using more than 2 pieces in the X or Y direction, a priority must be set to determine which piece to start first.

1. Priority: X - Left/Right, Y - Top/Bottom

X direction: horizontal direction is the first priority, and vertical direction will be the second.


Y direction: vertical direction is the first priority, and horizontal direction will be the second.

Frame out

By adding a “Frame out” command to the pattern color number, the machine can move the frame and stop it on the position that you set up after sewing all of a color. When you restart it, the frame will move to the normal stitching position and continue to work. This function is convenient for trimming of threads in the middle of sewing or placing an appliqué.

Note: If [etc.func read/write] in the Open design is checked, settings of [Frame out] will be saved automatically.

When you click on the frame out button, the menu opens.

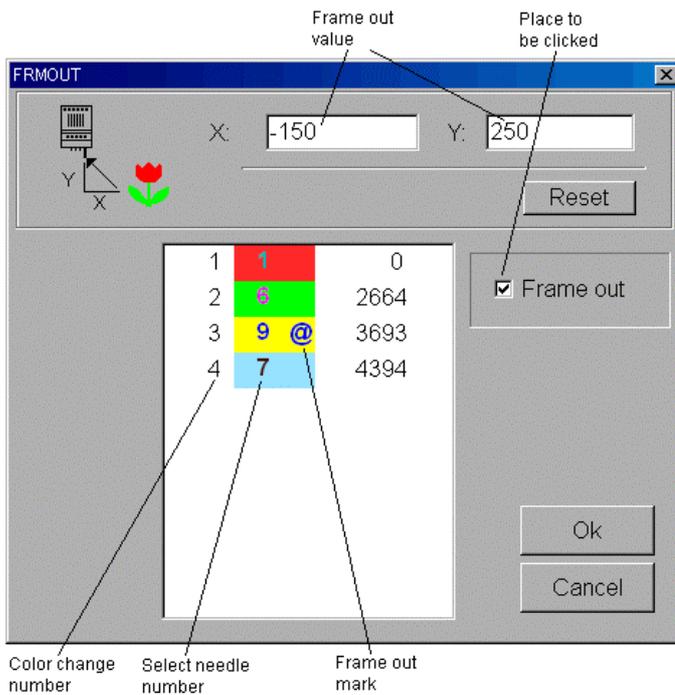


Input the amount of the frame out by numbers, and select the color change that you want to move at the end of. Click on [Frame out]. The @ sign will appear on the right of the needle number.

With the start point of the pattern as a base point, please set the distance to move for the frame out.

How to set frame out

Example)

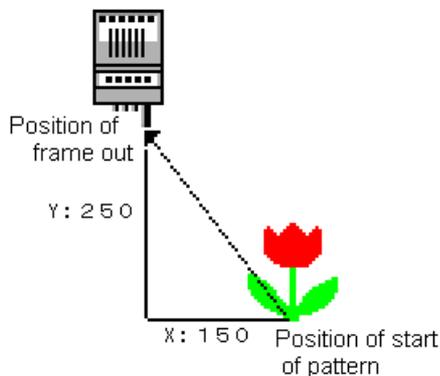

1. X: -150 Y: 250 Input these numbers.
2. Please click on the color change number you desire to add the frame out to.
3. Please click on [Frame out]. When this is set, an @ sign is put next to the needle bar number.
4. When you click on [OK] after input, the screen will close and the frame out is set.

Offset

If you set up an off set position, the frame moves from the off set position to its initial position and starts working.


Using the off set setting, you can start stitching from wherever you want.

Use the off set setting with the origin function, and the frame will move back to the off set position automatically after it completes stitching.

Note:

If [etc.func read/write] in the Open design dialogue box was checked, the settings of [Offset] will be saved automatically.


When you click on the [Offset] button, the input screen will open.

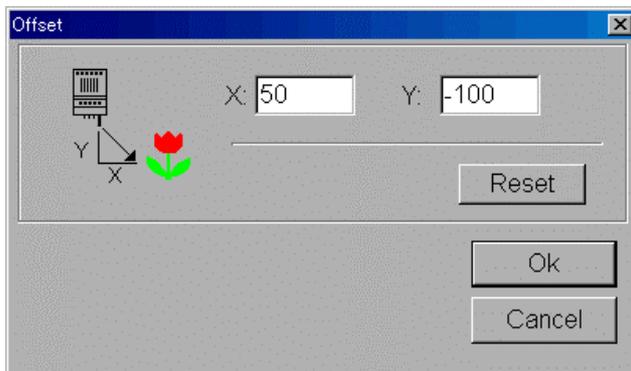

With the start point of the drive frame as a base point, please set the move distance to the start point of the pattern.

How to set offset

Example)

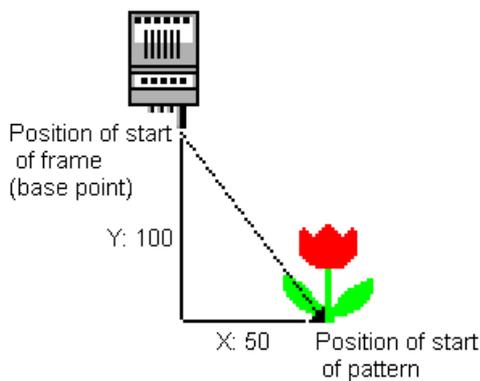


1. X: 50 Y: -100 Input these numbers.
2. When you click on [OK] after input, the screen will close.

Changing the background color

You can change the background color (cloth color).

When you click on the [Change of background color] button, the window of change of background color appears.

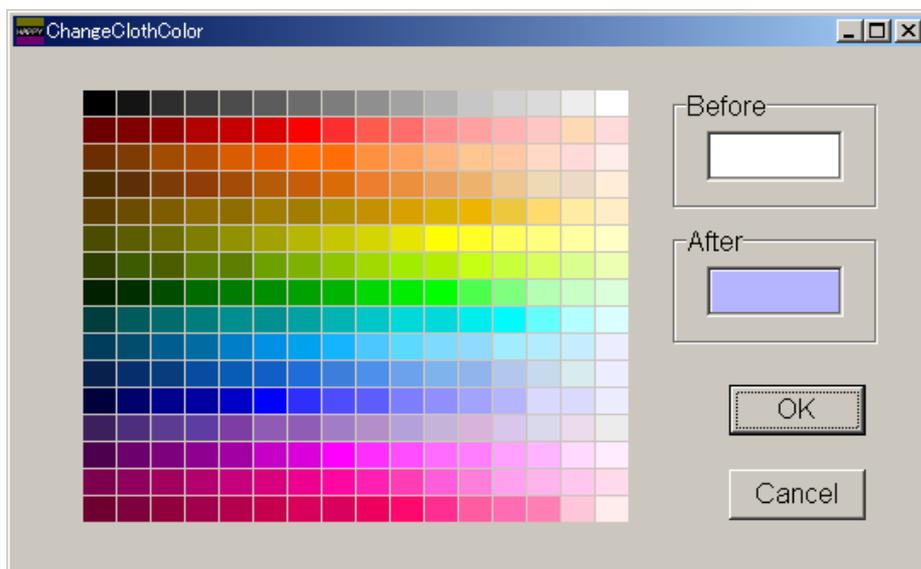

The color you set will remain unchanged until you change the background color.

The current background color is shown in the window marked [Before]. When you click on the color pallet, a new color appears in the window marked [After]. When you click on [OK], the background color changes.

View Jump

View every jump in the design.

When you wish to remove the jumps from the display, please click on it again.

Stitch point

Indicate stitch points by placing dots in each one.

If the pattern color is black, the dot will be yellow.

In a large pattern, the dot size might be small.

You can change the dot size with the next icon "Changing size of stitch point".

Changing size of stitch point

If the needle drop point display button has been pressed, when you click on this button, the needle drop point is displayed larger. To return it to its previous size, click on it again.

Zoom-in, out

When you click on this button, the pattern in the display will be enlarged or reduced. A marker will indicate the center.

(This function only affects the view, not your design.)



View the selected block by color

You can use this button if you have clicked on [Simple Edit]. Refer to [View the selected block by color] in [Simple Edit].



Viewpoint

Changes view of the design.

You can move the viewpoint by using the direction key.



[To right] Key

Click on this key to change viewpoint to right side.



[To left] Key

Click on this key to change viewpoint to left side.



[To upper] Key

Click on this key to change viewpoint to upper side.



[To lower] key

Click on this key to change viewpoint to lower side.

Moving amount



You can change the step of the direction key.

You can change it by using the up and down keys, or put in the number from your keyboard.

If you increase the number a lot, you might not be able to see the pattern because the pattern has shifted out of the window.

Simple editing

The program offers some basic editing functions such as moving a stitch, change a stitch function, changing the design size and searching for a stitch point. You can save this simple edited data.



Note:

**Please back up the data before the simple editing so as not to lose its original data.
You can save it with the same file name on the original data after the simple editing.**



Click on “Simple edit” on the menu to open the Editing menu

You can only click on Simple edit in the Data send Mode. (A design must be open to view this menu)

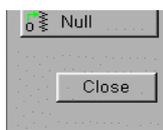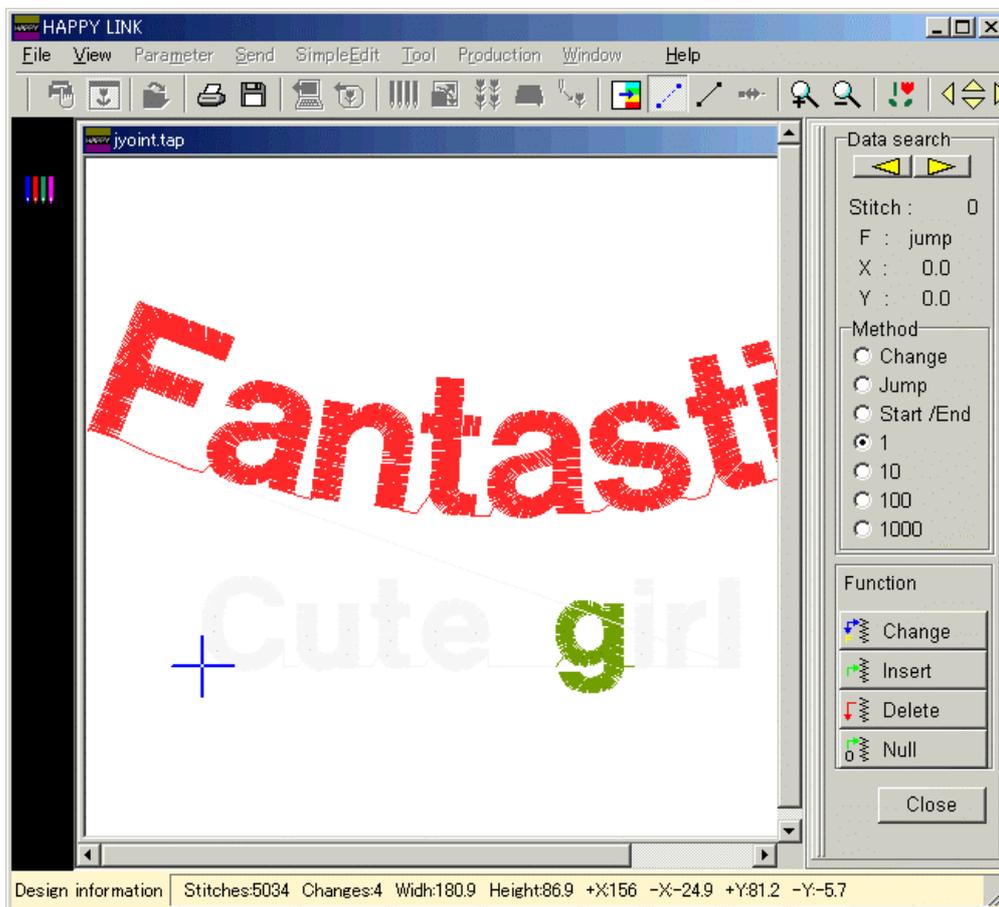

Click on this “Close” button and it will return to the “Data sending mode”.

When you click on [Close] if you edited the file, the following message is displayed.



(This pattern is edited. Do you want to overwrite this pattern?)

When you click on [Yes], the contents of the design are replaced with the edited information.

When you click on [No], the edits are forgotten.

"Simple edit" has the functions below.

1. Data search

Move to the stitch you want to edit and have the stitches (the number of stitches) and data displayed.

2. Search Method

Select the method to search stitch data.

3. Function

Allows you to add, erase, or move selected stitches. The design data itself will be changed here. Please backup the original data before the simple edit.

Change stitch setting:

You can change the present stitch to a color change, jump, end, or a normal stitch.

Insert stitch:

You can insert a color change, jump, end, or a normal stitch in front of the present stitch position.

Delete:

You can delete the present stitch.

Null stitch (zero data):

You can insert a Zero stitch.

4. View the selected block by color

With this button pressed, you will get only the color block at the position of the current stitch displayed. (Usable only in editing).

5. Cancellation of edited contents (Edit revert)


You can cancel the [Simple Edit]. The design data and the settings of [Needle selection] return to the condition before you began.

Note:

If you are closing the pattern, the editing will be finished.


If you are finishing the editing without saving the data, you will be asked whether you want to save the data or not.

Data Search

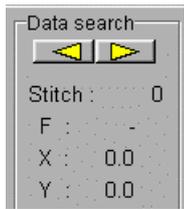

Please move to the stitch you want to edit and have the stitches (the number of stitches) data in editing displayed. It also indicates the position of the stitches with a marker (shaped cursor).

The edit screen

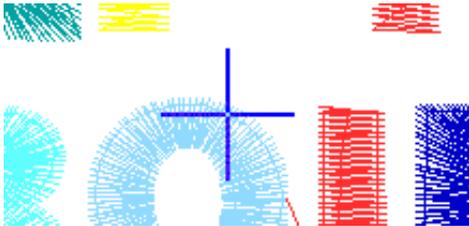

Stitch

Showing stitch number as selected

F

Showing function of selected stitch

X

Showing X movement data

Y

Showing Y movement data

[Forward search] Key



Scroll forward through stitch points.


[Backward search] Key



Scroll back through stitch points.

The method of searching can be selected from [Search Method].

Search Method

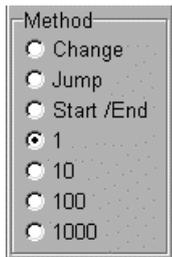

Please select how to select stitch (number of stitches) data from the following.

[Color change] search

This option will search  forward or  back color by color

If the pattern has a color change function, you can change the needle in embroidery.

[Jump] search

This option will search from one jump stitch function to the next.

Jump function will skip stitching without sewing.

[End Point] search

This option will take the cursor to the start point or end point.

[Move 1]

This option will search  forward and  back 1 stitch at a time.

[Move 10]

This option will search  forward and  back 10 stitches at a time.

[Move 100]

This option will search  forward and  back 100 stitches at a time.

[Move 1000]

This option will search  forward and  back 1000 stitches at a time.

Function




The Simple edit menu can add, erase, move a stitch and change a function.

Note:

If you name this setting with the same name as the original file, it will replace the original file. Please backup the original data before editing.



Click on this icon to open the stitch change menu. You can change stitch data and functions for selected stitches.

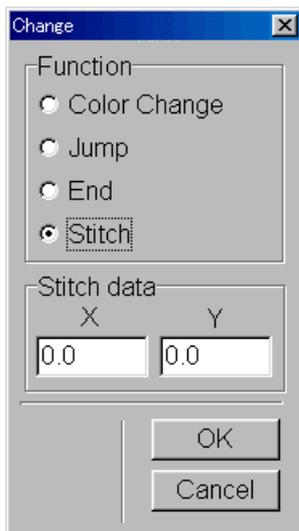

When selecting a Jump function or Stitch, You need to input "X data", "Y data".


When selecting (Color change) or (End) function, you do not have to enter stitch data.

Clicking on [OK] will save changes.

The pattern will be changed when you change the setting.

 [Insert] Key

Click on this icon to insert a stitch before selected stitch point, and then the stitch insert menu will open.

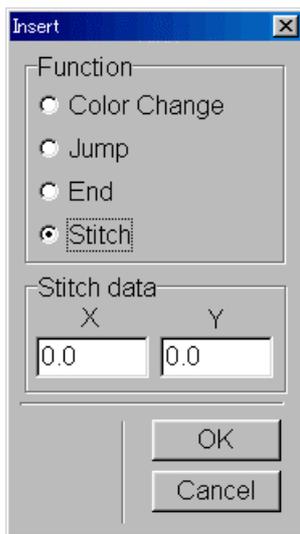


When selecting a Jump function or Stitch, You need to input “X data”, and “Y data”.
When selecting (Color change) or (End) function, you do not have to enter stitch data.

Clicking on [OK] will accept changes.
The pattern will be changed when you insert the data.

 [Delete] Key

Click on this icon to erase the selected stitch, and then a confirmation menu will open.

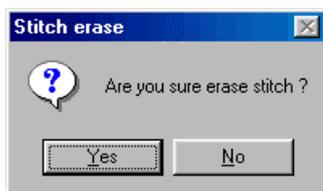


(Are you sure erase stitch?)

Click on [Yes] to delete the stitch.
The pattern will be changed when you delete the data.

 [Insert null stitch] Key

Click on this icon to insert a null stitch (No X, or Y movement data) before the selected stitch and the confirmation menu will open.

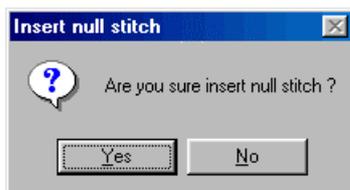

(Are you sure insert null stitch?)

Click on [Yes] to change design.

View the selected block by color

View the selected block by color (Usable only in simple editing)

Only the color block of the current stitches in [simple editing] is displayed.

Select [Change] in [Method]. The pattern displays only the color block at the position of the current when you search by  [Forward search] or  [Back search], if this button is pushed,

(Example) the pattern of the figure 1 is shown by color blocks and is shown in the figure 2, and figure 3.

Figure 1 : Usual pattern display

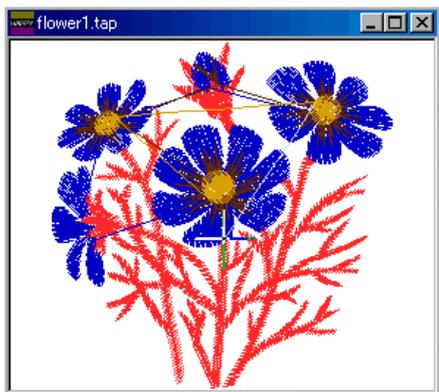


Figure 2 : Display by color block (1)


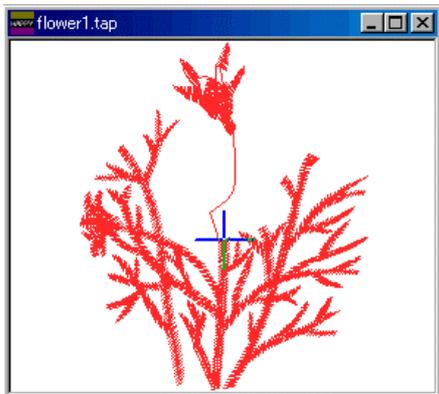


Figure 3 : Display by color block (2)

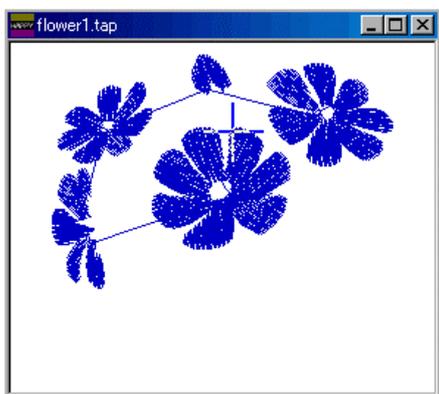


Cancel of edited contents (Edit revert)


You can cancel the [Simple Edit]. The design data and the setting of [Needle selection] return to the condition just before you changed them.

Note:

If you saved the file you edited during the [Edit revert], you cannot use [Edit revert]. And, if you edit something, you can use this function again. In this case, the pattern data and the setting of [Needle selection] return to the condition of the last save.

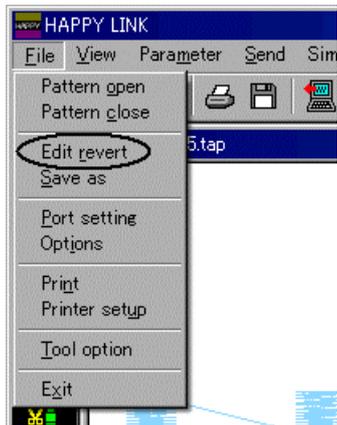

When you click on [File] – [Edit Revert] in the menu, the message [Lose all changes since your save?] is displayed.

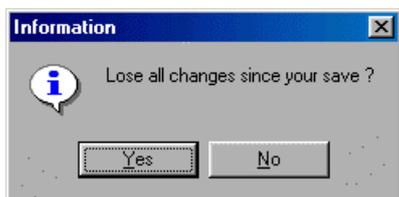

(Lose all changes since your save?)

When you click on [Yes], the edited contents are canceled and the contents will return to those before editing.




The indicator that indicated contents being edited goes off.

View the production data

You can view, print out, and output the file of the production data that is collected if your machine has these features.

When you select [Production] in the menu, the production data dialogue is displayed.

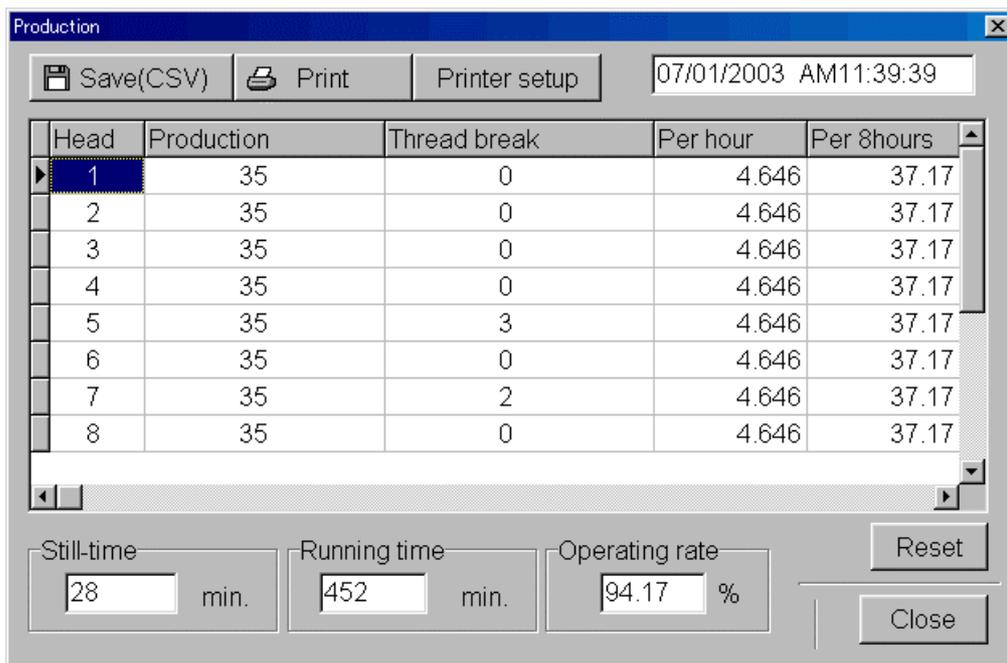

Function of production data dialogue

Head:

Head number of an embroidery machine. It shows each head number of the embroidery machine.

Production:

Production capacity.

Thread break:

Thread break frequency.

Per hour:

Production capacity in an hour.

Per 8 hours:

Production capacity in an eight hour shift.

Per 16 hours:

Production capacity in a sixteen hour time frame.

Still-time:

Interval.

The time when the operation of the embroidery machine is stopped.

Running time:

Operation hours.

The time until operation stops after the start button of the embroidery machine is pushed and operation is begun.

Operating rate:

The rate of operation.

Running time = Operating rate / total time

Total time is the time until the embroidery machine is turned off after it is turned on.

Total time = Running time + Still-time

Reset:

Reset all data.

Save:

Save the data in a CSV file.

Print:

Print out the data.

Printer setup:


Setting up of printer.

Arrangement of files in window


Display arrangement can be changed in the "Window" of the menu bar after reading some pattern files.




[Tile vertical]

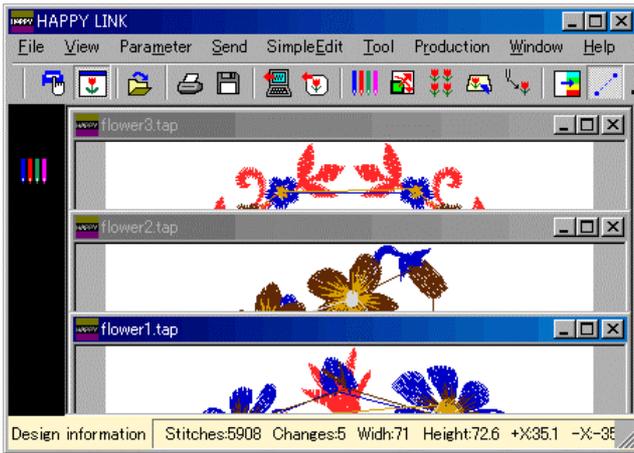


[Tile horizontal]

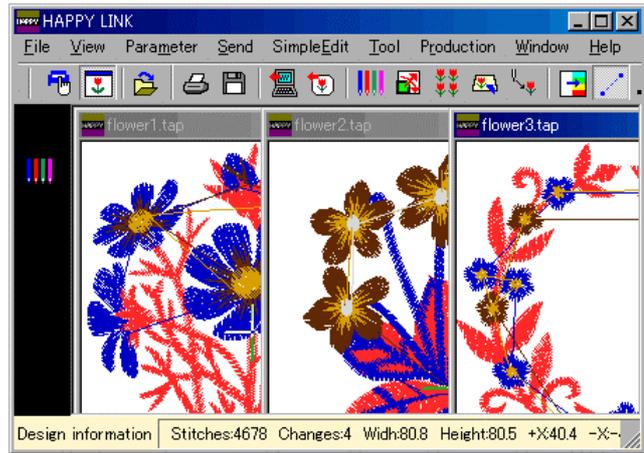

[Cascade] (arrangement like the cascade)

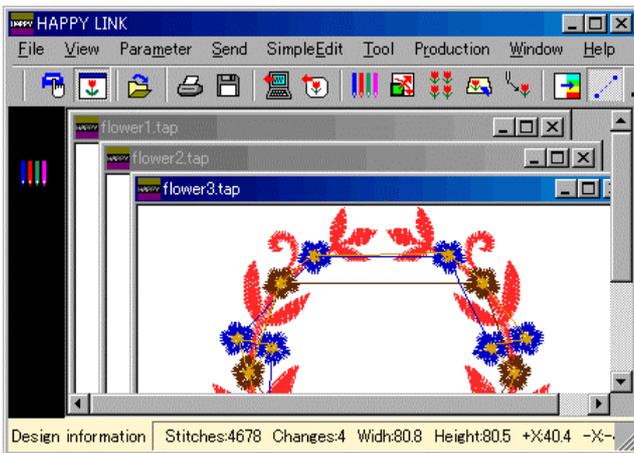

[Arrange icons] (The files are arranged when you minimize the pattern files and click on this.)

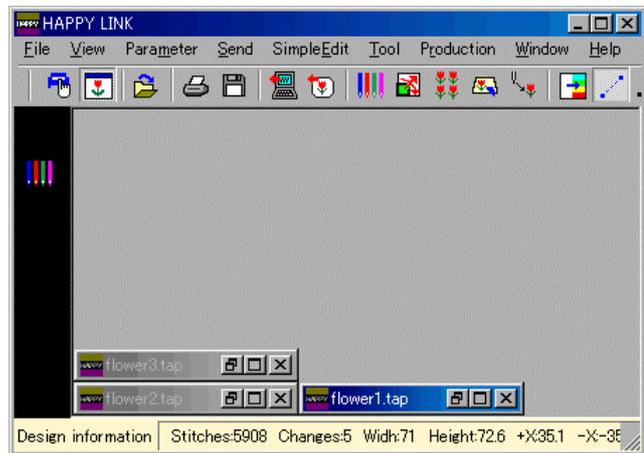

Trouble shooting Q/A

1. "Operation Mode" field

Q1: You have a "Communication has been interrupted!", "A connection is cut off.", "Machine is busy.", or, "Machine is not ready." Message.

A1: Incorrect cable connection.

Please double-check the serial cable connection between the machine and PC.

A2: Are you using the proper cable?

Please use a "RS232C Crossover Cable".

A3: Is the "Port setting" correct on the PC?

Click on "Port setting" in the "File" on the menu bar. Set "Port No." in PC that you connect the serial cable to. Adjust the "Baud rate" to the communication speed of the embroidery machine.

A4: You don't set the embroidery machine to the [drive mode] after having turned the machine on.

Set the embroidery machine to the [drive mode].

Note:

About the [drive mode], refer to the Instruction manual of the embroidery machine.

Q2: "USB is not ready" is displayed.

A1: You did not connect the embroidery machine to the PC with a USB cable.

Please connect the embroidery machine to the PC with a USB cable before you activate the HappyLink. Refer to the [Preparation] of the [Basic knowledge and operation] about connecting the cable.

A2: USB driver is not recognized.

After doing the following 5 items, please restart the software again.

[a] Turn the embroidery machine off.

[b] Close the HappyLink program.

[c] Remove the USB cable from the personal computer.

[d] Turn the embroidery machine on and set the embroidery machine to the [drive mode] (which is the mode you can start sewing).

[e] Connect the embroidery machine and the PC with the USB cable again.

Note:

If the [Add New Hardware Wizard] began, please install it in accordance with the driver installation. Refer to [Installing USB driver].

About the [drive mode], refer to the Instruction manual of the embroidery machine.

A3: USB driver is not installed.

Please check whether the driver has been installed.

How to check:

With the embroidery machine and PC connected with a USB cable

Please click on in order: [Start] - [Setting] - [control Panel] in Windows. Then open [System] and choose [Device Manager]. If "Happy Embroidery Machine" is displayed in the column under the Universal serial controller, the driver is installed.

1. When the driver is not installed

Please install it in accordance with the [Installing USB driver].

2. There is a device marked [Unknown...], or, there is a [!] mark (or red X mark) at the top of the device of [HAPPY Embroidery Machine].

After you do the following 5 items, please check again whether the driver has been installed.

[a] Turn the embroidery machine off.

[b] Close the HappyLink program.

[c] Remove the USB cable from the personal computer.

[d] Turn the embroidery machine on and put the embroidery machine into [drive mode] (which is the mode you can start sewing).

[e] Connect the embroidery machine and the PC with the USB cable again.

Note:

If the [Add New Hardware Wizard] began, please install it in accordance with driver installation. Please refer to [Installing USB driver].

About the [drive mode], refer to the Instruction manual of the embroidery machine.

Q3: Cannot open “Operation mode”.

A1: You select the machine type “Incompatible with HAPPY Link” in the “Mode setting” menu.

If you have a compatible machine, change the setting to “Compatible with HAPPY Link” in “mode setting” menu then restart the “HAPPY Link” program.

A2: There is no pattern data in the embroidery machine. In this case, when you click on the Operation mode button, two messages are indicated. (“Pattern is not found.” and “It could not get data. Please try again.”). In addition, the [Operation mode] is not started.

Please try again after transmitting a pattern to the embroidery machine in the [Data send mode].

2."Data send mode" field

Q1: You cannot read design data from data disk.

A1: This software only reads Happy format (.TAP) and DST format (.DST,.DSB,.DSZ). So you cannot read design data in other formats.

Q2: The embroidery machine emits beep sound.

A1: This sound is created when data is transmitted and transmission ends.

A2: This sound comes out when you click on a menu or tool button.

Q3: Pattern data is not transmitted.

A1: Baud rate of the machine and personal computer is not properly set.

Please set port settings properly. Then, try again.

Q4: The needle bar selection is not transmitted to the embroidery machine.

A1: There is no [Happy original setting file].

To check [read/write in etc.func] so that a [Happy original setting file] is created. After that, please set the [needle selection] to make the [Happy original setting file].

A2: You haven't checked [read/write in etc.func] for various settings

Please check [read/write in etc.func] for various settings

Q5: You have a "Communication has been interrupted!", "A connection is cut off.", "Machine is busy.", or, "Machine is not ready." Message.

A1: Refer to the "Operation mode field".

Q6: "USB is not ready." Message.

A1: A USB cable is not connected.

Please connect your HAPPY embroidery machine and your PC with a USB cable.

Glossary

Back up

This is to store copied data in another location

Baud rate

This is the RS232C communication speed.

Borer

This device cuts a hole in the cloth.

CD-ROM drive

This is a drive to read CD's.

Click

This is to operate the left mouse button by pressing and releasing it.

Close

This is to close a window or dialogue.

Common file

This is a file to be used for other software.

COM port

This is a serial port to connect the RS-232C cable with personal computer.

Communication speed

This is speed for transferring data by RS232C and shown in bps. (baud rate)

Color block

This is an area divided by color in a pattern.

Control panel

This is a folder to conduct various settings of Windows.

CPU

CPU: This is abbreviation for Central Processing Unit.

Cross cable

This is a cable used when connecting a RS232C device.

Data format

This is the means of storage of data in the pattern file.

Data send mode

This is one of two different sorts of basic modes in HappyLink. This enables you to read patterns, select the order of needle bars and transmit such data to the embroidery machine. (The other mode is operation mode)

Decompression

This is to return a compressed file to its previous size.

Desk top

This is a window with icons on display shown when activating Windows.

Dialogue

This is a box to input parameters and is displayed when selecting menu bar selections and tool buttons.

Directory

This is the concept of an area that holds files, or the base of a stratified structure in the disk. Same as folder

Disc format

This is expanded style of the pattern file.

Double-click

This is to make fast click twice in a row.

Drag

This is to move mouse with the mouse button depressed.

Drag & drop

This is to release the mouse button after dragging something to a new location.

Drive

This is a supplementary device for storing files.

Drive mode

This is the mode you can start sewing in the embroidery machine. Refer to the Instruction manual of the embroidery machine.

Driver

This is a program to control devices connected to a personal computer. (Device driver)

EIA

Abbreviation of American Electronic Industries Alliance

Explorer

This is the name of a window to list files and folders.

Export

This is to convert data to use file with other software and save it.

Floppy disk

Type of media to record data magnetically

Folder

This is a general name for a place to save files.

Font

The style of characters.

Form

This is the entire menu to be displayed after activation of software.

Happy original setting file

This is to save various settings (needle bar etc.) of patterns in Happy format.

Hard disk

This is a fixed disk of a personal computer used for primary storage.

Icon

This is a button to activate software as illustrated on the desktop in a simple drawing.

Indicator

This is a device to display the function in operation.

Location of installation

This is a place (folder) to store the program files of the software.

Maximization of window

This is to maximize a form on the entire computer screen.

Memory

This is storage space in a personal computer.

Menu bar

This is on the upper part of the window, where functions are listed by name.

Part of [File], [Editing], etc.

Needle bar selection

This machine is designed for multiple needle sewing. You will be able to pick any colored threads you desire for a pattern. Therefore, you will be able to allocate colors you desire to any area of the pattern and sew it automatically.

Generally, a pattern consists of a group of blocks of several colors, and you can designate any colored thread (needle bar number) for these color blocks in advance.

This designation is [Needle Bar Selection].

Number box

This is a dialogue box to input numbers.

Open

This is to open a form or dialogue box.

Operation mode

This is one of two different sorts of basic modes in HappyLink. You can operate settings in the embroidery machine by using a personal computer. (The other mode is Data send mode.)

OS

This is software to control of the computer. (Operating System)

PC

This is the abbreviation for personal computer.

Port No

This is the number for the connector to connect a personal computer and a peripheral device.

Rename

To change the name of the pattern file

RS232C

This is a standard used as communication and is used for transferring data between a personal computer and a peripheral device (embroidery machine).

Personal computers have port numbers such as COM1, COM2.

Scroll bar

When you can't see all of a window entirely, please drag this bar to move the internal position for display.

Serial cable

This is a RS232C cable to communicate with the embroidery machine.

Serial communication

This is communication method to transfer or receive data by RS232C cable.

Serial port

This is connector to use when making RS232C connection.

Serial port No

This is serial port number for COM1 or COM2 etc.

Set up

This is to install software.

Slide bar

When you change a parameter number in a dialogue box, you can drag a slide bar by using a mouse.

Software

This is same as program.

Tool button

This starts part of the software and is illustrated by a button.

Uninstall

This is to remove software installed in personal computer.

USB

This is standard for interface to connect personal computer and some peripheral devices.

Window

This is square area divided on the form.

Wizard

This is to display a process that users answer questions in order to set up a particular situation within the program.